

how to play

A. Product buttons

- Press any product button and a random price will be shown on the display screen.








 


 

B. Manually

- Or enter the values manually and then press '+' to enter another amount.







 

C. Playing

- Repeat **A** and **B** until you have finished shopping then press the 'total' button and the total cost will be shown.
- Key in the amount of money tendered and press the 'cash' button to see the change required.













Example 1

transaction	enter	display
	 ----->	0.00
£1.23	   ----->	1.23
+ £1.23	    ----->	1.23
total £2.46	 ----->	2.46
tender £5.00	  ----->	5.00
change £2.54	 ----->	2.54

Example 2

transaction	enter	display
	 ----->	0.00
£3.20	 ----->	3.20
+ £1.50	 ----->	1.50
total £4.70	 ----->	4.70
tender £20.00	   ----->	20.00
change £15.30	 ----->	15.30

Example 3

transaction	enter	display
	 ----->	0.00
£3.20	 ----->	3.20
£1.50	 ----->	1.50
+ £1.23	    ----->	1.23
total £5.93	 ----->	5.93
tender £20.00	   ----->	20.00
change £14.07	 ----->	14.07

Pay with your credit card

- Insert the credit card into the slot of the chip and pin (you will see a red light).
- Press any 3 digits followed by the 'enter' button (you may enter the same digit 3 times).
- You will hear a positive sound and see a green light.

Note: you must press at least 3 digits to activate the green light and positive sound; otherwise, you will hear a negative sound and the red light will remain on.

Using the microphone

Press and hold the microphone button while speaking into the microphone.

Using the hand-held barcode scanner

- Press the hand-held scanner button over any shopping item. Each time a 'beep' sound is heard.



electronic cash register

user guide

142528/142529 0915

Early Learning Centre®
Watford WD24 6SH England.

Customer Service Department
0371 231 3513

features

