

cleaning and care



troubleshooting

Symptom	Reason	Remedy
Bubble fluid leaks from the unit	Unit is being used on a sloped surface.	Always operate the mower on a flat, even surface.
	Bubble solution overflows the bubble chamber.	Use the filler cup to measure the correct amount of bubble solution.
Bubbles aren't produced	Dirty or stuffed up bubble chamber.	See instructions on Cleaning and Care then carefully rinse bubble chamber.
	Your walking pace is too rapid.	Walk more slowly and steadily.
	The unit hasn't been pushed far enough to produce bubbles.	You need to push the unit several steps before bubbles are produced.
	Oil-based lubricants or silicone may be present in the bubble chamber.	Always avoid using silicone or oil-based lubricants on the wheels because they prevent bubble formation even if just small amount enters the bubble chamber.
	The unit's wheels do not come in contact with the ground.	Make sure the unit goes forward with the wheels always in contact with the ground.
	Insufficient bubble solution in the bubble chamber.	Fill up the unit with bubble solution.
Foam appears in the bubble solution	Clogged bubble chamber.	Carefully clean the bubble chamber.

Caution!

- Always ensure your child never plays with this unit near an actual operating lawn mower.
- Only use designated bubble solution with this unit.
- Avoid spilling the bubble solution when cleaning or refilling the unit as this may cause a slippery floor surface.
- The recommended bubble solution for this unit may cause stains or leave a sticky residue on certain surfaces.
- This unit is for outside play use only.
- Package has to be kept since it contains important information
- Remove or dispose of all packaging safely before giving to children
- Harmful if swallowed.
- Please keep bubble solution away from eyes.
- After using bubble solution please wash your hands.
- Parents: Please caution your children against drinking the bubble solution and make sure they keep it out of contact with the eyes.
- To be used under the direct supervision of an adult.




bubble mower user guide

142695 0815
Early Learning Centre®
Watford WD24 6SH England.

Customer Service Department
0371 231 3513

contents

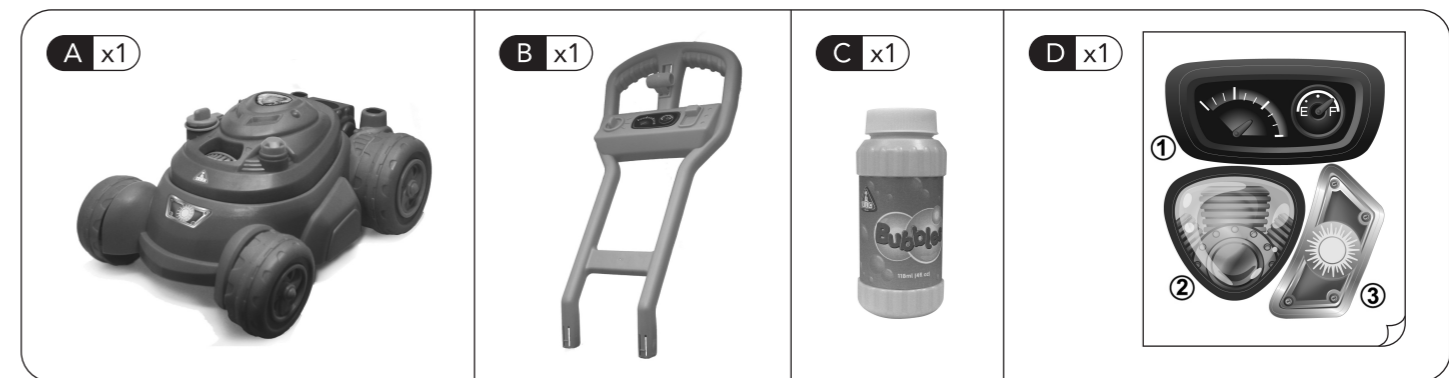

assembly

