




Baby Delight

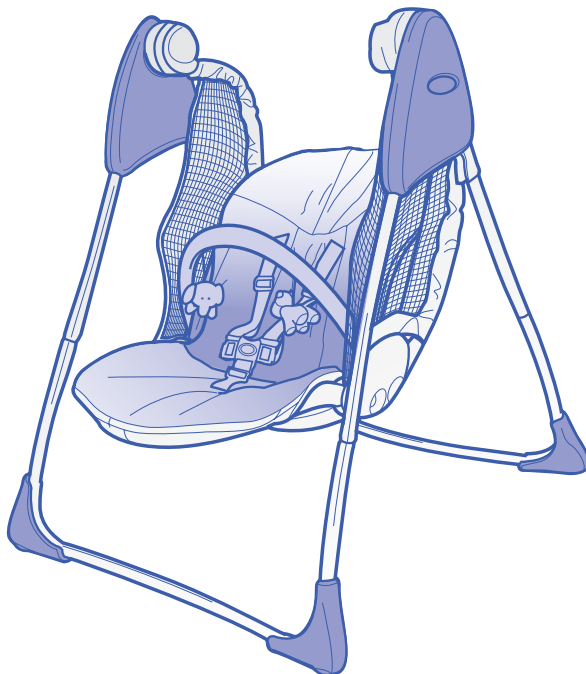

INSTRUCTIONS
INSTRUCTIONS
BEDIENUNGSANLEITUNG
INSTRUCTIES
INSTRUCCIONES
ISTRUZIONI
INSTRUÇÕES

UTASÍTÁSOK
INŠTRUKCIE
VEJLEDNÍNG
ANVISNINGAR
OHJEET
INSTRUKSJONER
ИНСТРУКЦИЯ

INSTRUKCJA
ΟΔΗΓΙΕΣ
POKYNY
ИНСТРУКЦИИ
INSTRUCIUNI
KASUTUSJUHISED
INSTRUKCIJA


INSTRUKCIJA
إرشادات
UPUTE
UPUTSTVA
NAVODILA
TALIMATLAR

**WARNING IMPORTANT!
RETAIN FOR FUTURE REFERENCE
READ CAREFULLY**


©2009 Graco PD117104 C 11/09




Parts list

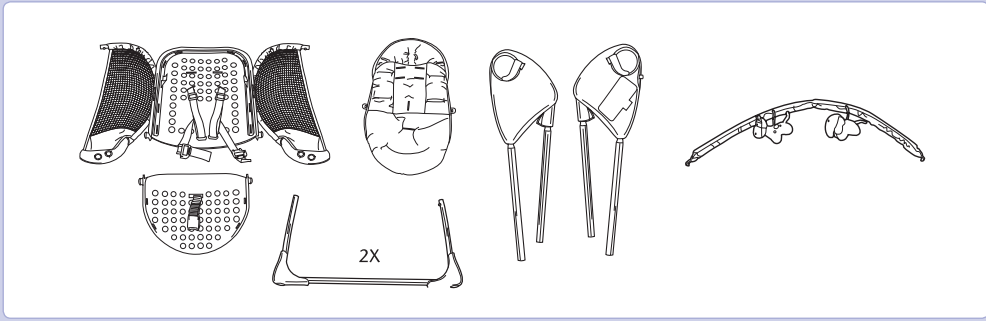


Assembly

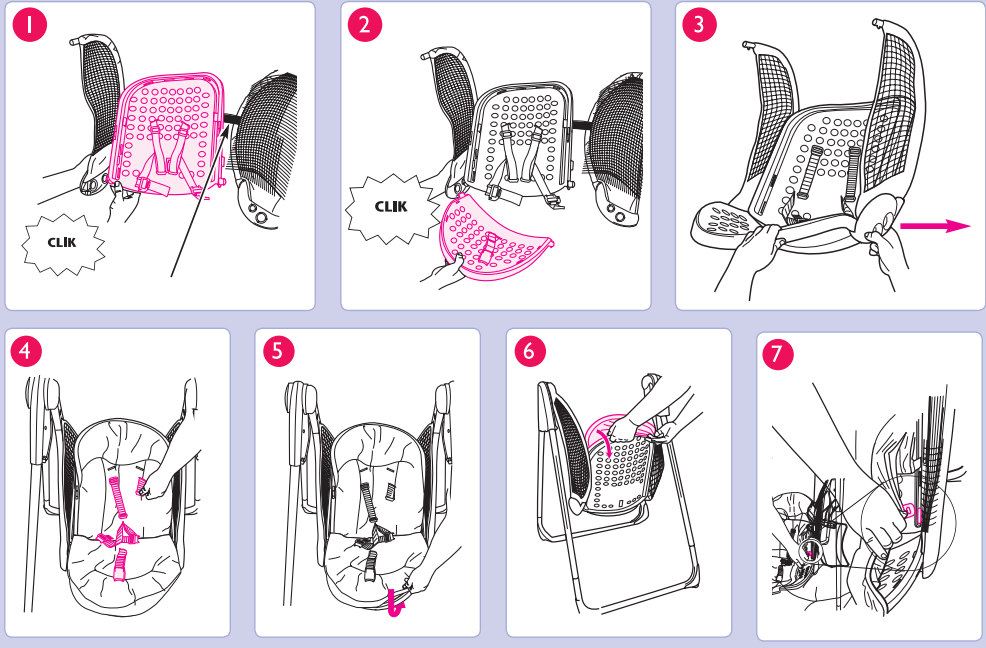


Attaching Legs

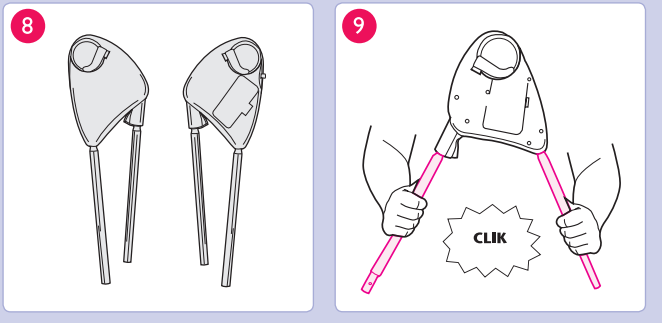


Rear Tube

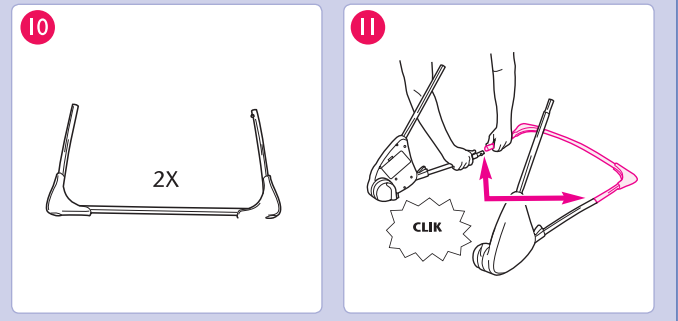

Front Tube

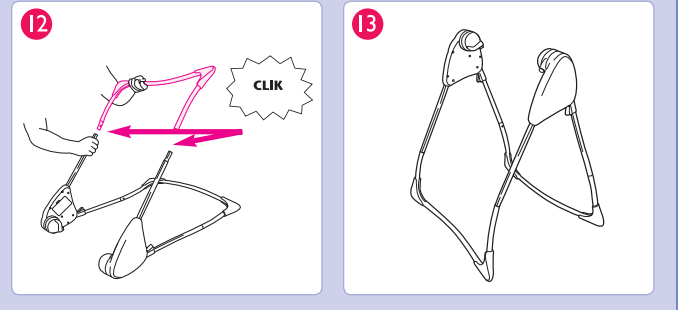

Attaching Seat to Frame

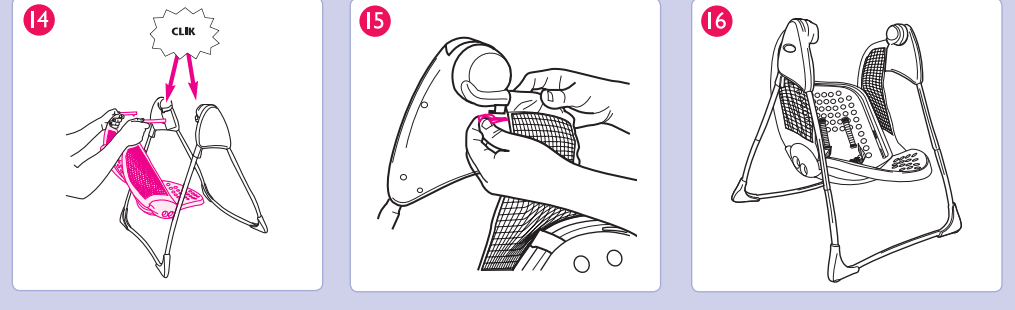



To Secure Child

17

18

19

20

21

22

23

24

To Adjust Recline

25

26

Installing batteries

27

On/Off

28

29

Storage

30

31

Toy bar

32

33



GB IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THEM FOR FUTURE REFERENCE. YOUR CHILD'S SAFETY MAY BE AFFECTED IF YOU DO NOT FOLLOW THESE INSTRUCTIONS.

F IMPORTANT : LISEZ SOIGNEUSEMENT CES INSTRUCTIONS AVANT TOUTE UTILISATION ET CONSERVEZ-LES POUR VOUS Y REFERER ULTERIEUREMENT. SI VOUS NE LES RESPECTEZ PAS, LA SECURITE DE VOTRE ENFANT PEUT EN ETRE AFFECTEE !

D WICHTIG: VOR DER BENUTZUNG DES KINDERWAGENS DIESE ANLEITUNG UNBEDINGT SORGFÄLTIG DURCHLESEN UND AUFBEWAHREN. DIE SICHERHEIT IHRES KINDES KANN GEFÄHRDET SEIN, WENN SIE DIESE ANWEISUNGEN NICHT BEFOLGEN.

NL BELANGRIJK: LEES DEZE INSTRUCTIES ZORGVULDIG DOOR EN BEWAAR ZE TER REFERENTIE IN DE TOEKOMST. U KUNT DE VEILIGHEID VAN UW KIND IN GEVAAR BRENGEN ALS U DEZE INSTRUCTIES NIET LEEST.

E IMPORTANTE: LEA ESTAS INSTRUCCIONES DETENIDAMENTE ANTES DE UTILIZAR EL CARRITO Y GUÁRDALA PARA USOS FUTUROS. LA SEGURIDAD DEL NIÑO PUEDE verse COMPROMETIDA SI NO SE SIGUEN ESTAS INSTRUCCIONES.

I IMPORTANTE: LEGGERE ATTENTAMENTE QUESTE ISTRUZIONI PRIMA DELL'USO E CONSERVARLE PER RIFERIMENTI FUTURI. LA MANCATA CONSULTAZIONE DI TALI ISTRUZIONI PUÒ COMPROMETTERE LA SICUREZZA DEL VOSTRO BAMBINO.

P IMPORTANTE: LEIA ESTAS INSTRUÇÕES ATENTAMENTE ANTES DA UTILIZAÇÃO E GUARDE-AS PARA FUTURA REFERÊNCIA. A SEGURANÇA DO SEU FILHO PODE SER AFECTADA SE NÃO SEGUIR ESTAS INSTRUÇÕES.

H FONTOS: A HASZNÁLAT ELŐTT GONDOSAN OLVASSA ÁT EZEKET AZ UTASÍTÁSOKAT ÉS ŐRIZZE MEG AZOKAT KÉSŐBBI HÍVATKOZÁS CÉLJÁBÓL. KEDVEZŐTLENŰL BEFOLYÁSOLHATJA GYERMEKÉNEK BIZTONSÁGÁT, HA NEM TARTJA BE EZEKET AZ UTASÍTÁSOKAT.

SK DŮLEŽITÉ: PRED POUŽITÍM SI POZORNE PREČÍTAJTE NASLEDUJÚCE POKYNY A USCHOVAJTE ICH PRE ĎALŠIE POUŽITIE. AK SA TÝMITO POKYNNI NEBUDETE RIADIŤ, MÔŽETE OHROZIŤ BEZPEČNOSŤ SVOJHO DIETAŤA.

DK VIGTIGT: LÆS BRUGSANVISNINGEN OMHYGGELIGT FØR KLAPVOGNETN TAGES I BRUG OG GEM BRUGSANVISNINGEN TIL FREMTIDIG BRUG AF HENSYN TIL BARNETS SIKKERHED.

S VIKTIGT: LÄS DENNA BRUKSANVISNING NOGA FÖRE ANVÄNDNING OCH SPARA DEN FÖR FRAMTIDA BRUK. BARNETS SÄKERHET KAN PÅVERKAS OM INTE DESSA INSTRUKTIONER FÖLJS.

FIN TÄRKEÄÄ: LUE KÄYTTÖOHJE ENNEN KÄYTTÖÄ JA SÄILYTÄ SE MAHDOLLISTA TARVETTA VARTEN. JOS ET NOUDATA NÄITÄ OHJEITA, LAPSESI TURVALLISUUS SAATTAA VAARANTUA.

N VIKTIG: LES DISSE INSTRUKSJONENE NØYE FØR BRUK OG OPPBEVAR DEM FOR SENERE BRUK. BARNETS SIKKERHET KAN KOMPROMITTERES HVIS DU IKKE FØLGER DISSE INSTRUKSJONEONE.

RU ВАЖНО: ВНИМАТЕЛЬНО ПРОЧИТАЙТЕ ДАННУЮ ИНСТРУКЦИЮ ДО НАЧАЛА ЭКСПЛУАТАЦИИ КОЛЯСКИ. СОХРАНИТЕ ИНСТРУКЦИЮ ДЛЯ ДАЛЬНЕЙШЕГО ИСПОЛЬЗОВАНИЯ. НЕСОБЛЮДЕНИЕ ПРИВЕДЕННЫХ ИНСТРУКЦИЙ МОЖЕТ ПОСТАВИТЬ ПОД УГРОЗУ БЕЗОПАСНОСТЬ ВАШЕГО РЕБЕНКА.

PL WAŻNE: PRZED PRZYSTĄPIENIEM DO UŻYTKOWANIA WÓZKA NALEŻY UWAGNIE PRZECZYTAĆ NINIEJSZĄ INSTRUKCJĘ I ZACHOWAĆ JĄ NA PRZYSZŁOŚĆ. NIEPRZESTRZEGANIE INSTRUKCJI MOŻE NARAZIĆ BEZPIECZEŃSTWO TWOJEGO DZIECKA.

EL ΣΗΜΑΝΤΙΚΟ: ΔΙΑΒΑΣΤΕ ΠΡΟΣΕΚΤΙΚΑ ΤΙΣ ΠΑΡΟΥΣΕΣ ΟΔΗΓΙΕΣ ΠΡΙΝ ΑΠΟ ΤΗ ΧΡΗΣΗ ΚΑΙ ΦΥΛΑΞΤΕ ΤΙΣ ΓΙΑΤΙ ΘΑ ΣΑΣ ΦΑΝΟΥΝ ΧΡΗΣΙΜΕΣ ΣΤΟ ΜΕΛΛΟΝ. Η ΑΣΦΑΛΕΙΑ ΤΟΥ ΠΑΙΔΙΟΥ ΣΑΣ ΕΞΑΡΤΑΤΑΙ ΑΠΟ ΤΗΝ ΤΗΡΗΣΗ ΤΟΥΣ.

CZ DŮLEŽITÉ: PŘED POUŽITÍM SI PEČLIVĚ PŘEČTĚTE NÁSLEDUJÍCÍ POKYNY A USCHOVEJTE JE PRO DALŠÍ POUŽITÍ, POKUD SE TĚMITO POKYNY NEBUDETE ŘÍDIT, MŮŽETE OHROZIT BEZPEČÍ SVÉHO DÍTĚTE.

HR VAŽNO: PRIJE UPORABE PAŽLJIVO PROČITAJTE OVE UPUTE I ČUVAJTE IH RADI NAKNADNIH POTREBA. SIGURNOST VAŠEG DJETETA MOŽE BITI UGROŽENA AKO NE SLIJEDITE OVE UPUTE.

RO IMPORTANT: CITIȚI ACESTE INSTRUCȚIUNI CU ATENȚIE ÎNAINTE DE UTILIZARE ȘI PĂSTRAȚI-LE PENTRU REFERINȚĂ VIITOARE. SIGURANȚA COPILULUI DVS. POATE FI AFECTATĂ ÎN CAZ DE NERESPECTARE A ACESTOR INSTRUCȚIUNI.

EE TÄHTIS! LUGEGE KÄESOLEV KASUTUSJUHEND ENNE TOOTE KASUTAMIST HOOLIKALT LÄBI JA HOIDKE SEE ALLES EDASPIDISEKS KASUTAMISEKS. KASUTUSJUHENDI MITTE JÄRGIMINE VÕIB TEIE LAPSE OHTU SEADA.

LT SVARBU: PRIEŠ NAUDOJIMĄ, ATIDŽIAI PERSKAITYKITE ŠIĄ INSTRUKCIJĄ IR IŠSAUGOKITE JĄ KAIP NUORODĄ ATEIČIAI. ŠIŲ NURODYMŲ NESILAIKYMAS GALI ĮTAKOTI JŪSŲ VAIKO SAUGUMĄ.

LV SVARĪGI: PIRMS LIETOŠANAS, LŪDZU, IZLASIET UZMANĪGI ŠO INSTRUKCIJU UN UZGLABĀJIET TO TURPMĀKAI ATSAUCEI. JA JŪS NEIEVĒROJAT ŠO INSTRUKCIJU, TAS VAR IETEKMĒT JŪSU BĒRNA DROŠĪBU.

AR مهم: قم بقراءة هذه الإرشادات بعناية قبل الاستخدام واحتفظ بها للرجوع إليها في المستقبل: قد تتأثر سلامة طفلك إذا لم تتبع هذه الإرشادات بعناية.

HR/BIH VAŽNO: PAŽLJIVO PROČITAJTE OVE UPUTE PRIJE UPOTREBE I SAČUVAJTE IH U SLUČAJU DA VAM USTREBAJU. SIGURNOST VAŠEG DJETETA MOŽE BITI UGROŽENA AKO NE SLIJEDITE OVE UPUTE.

SRB VAŽNO: PROČITAJTE PAŽLJIVO OVA UPUTSTVA PRE UPOTREBE I SAČUVAJTE IH ZA KASNIJU UPOTREBU. BEZBEDNOST VAŠEG DETETA MOŽE BITI UGROŽENA AKO NE SLEDITE OVA UPUTSTVA.

SL POMEMBNO: PRED UPORABO PAŽLJIVO PREBERITE TA NAVODILA IN JIH SHRANITE ZA PRIHODNJE. VARNOST VAŠEGA OTROKA JE LAHKO OGROŽENA, ČE NE BOSTE SLEDILI TEM NAVODILOM.

TR UYARI: KULLANMADAN ÖNCE BU TALIMATLARI DIKKATLICE OKUYUN VE İLERİDE REFERANS OLARAK KULLANMAK İÇİN SAKLAYIN. BU TALIMATLARA UYMAZSANIZ ÇOCUĞUNUZUN GÜVENLİĞİNİ TEHLİKEYE ATABİLİRSİNİZ.



GB WARNING

Failure to follow these warnings and the assembly instructions could result in serious injury or death.

WARNING: Always check the suspension system before use. Failure to follow this could result in falling down.

PLEASE SAVE OWNER'S MANUAL FOR FUTURE USE.

To prevent serious injury or death from child falling or being strangled in straps:

Always use harness.

WARNING: Never leave child unattended.

WARNING: Stop using product when child attempts to climb out or reaches 11 kg.

WARNING: It is dangerous to place this product on an elevated surface.

WARNING: Always use on a flat, level floor.

WARNING: This product is not intended for prolonged period of sleep. Should your child need to sleep, then place the child in a suitable cot or bed.

WARNING: Do not use the product without the seat cushion.

To be used from birth to 11 kg. Do not use for a child that weighs less than 5.5 pounds (2.5 kg), or a child premature or weakened - Use in most reclined position until child can sit up unassisted.

STRANGULATION HAZARD:

WARNING: Do not leave or place the product close to another product which could present a danger of suffocation or strangulation, e.g. strings, blind/ curtain cords etc.

Strings can cause strangulation. **DO NOT** place items with a string around your child's neck, such as hood strings or pacifier cords.

DO NOT suspend strings over the product or attach strings to toys.

DISCONTINUE USING YOUR PRODUCT should it become damaged or broken.

WARNING: Do not use the product if any parts are broken, torn or missing and use only spare parts approved by the manufacturer.

WARNING: Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires, etc. in the vicinity of the product.

This product requires adult assembly. Follow assembly instructions carefully. If you experience any difficulties, please contact the Customer Service Department.

Transformer or batteries: Product is not to be connected to more than the recommended number of power supplies.

Electronic toys (on certain models): Do not open. No serviceable parts inside. Remove and immediately discard plastic tab from slot in toy.

FOR SAFE BATTERY USE

Keep the batteries out of children's reach.

Only the recommended batteries or equivalent are to be used, volts and size.

Batteries are inserted with the correct polarity.

Remove exhausted batteries from the product.

DO NOT short-circuit supply terminals.

Rechargeable batteries are to be removed from the toy before being charged.

Rechargeable batteries are only to be charged under adult supervision.

Any battery may leak battery acid if mixed with a different battery type, if inserted incorrectly (put in backwards) or if all batteries are not replaced or recharged at the same time. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

Any battery may leak battery acid or explode if disposed of in fire or an attempt is made to charge a battery not intended to be recharged.

Never recharge a cell of one type in a recharger made for a cell of another type.

Discard leaky batteries immediately. Leaky batteries can cause skin burns or other personal injury. When discarding batteries, be sure to dispose of them in the proper manner, according to your state and local regulations.

Always remove batteries if the product is not going to be used for a month or more. Batteries left in the unit may leak and cause damage.

Recommended type batteries—alkaline disposables, size C (LR14-1.5V). NEVER mix battery types. Change batteries when product ceases to operate satisfactorily.



The crossed out wheelee bin symbol indicates the product is to be recycled.

CARE AND MAINTENANCE

FROM TIME TO TIME CHECK YOUR PRODUCT for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed. Use only Graco replacement parts.

REMOVABLE CLOTH SEAT COVER may be machine washed in cold water on delicate cycle and drip-dried. **NO BLEACH.**

TO CLEAN FRAME, use only household soap and warm water. **NO BLEACH** or detergent.

Excessive exposure to sun or heat could cause fading or warping of parts.

PROBLEM SOLVING

Product won't operate:

1. No batteries in swing.
2. Batteries dead.
3. Speed setting too low.
4. Batteries in backwards — check "+" and "-".
5. Corrosion on battery terminals. Rotate batteries in place against terminals, or clean with sandpaper or steel wool if corrosion is severe.
6. Baby leaning too far forward.
7. Baby grabbing swing legs. (Discontinue use.)
8. Seat not pushed high enough for a good start.
9. Protective device activated. (Turn off motor, wait 3 minutes, then restart swing.)

Seat doesn't swing very high:

1. Control setting too low.
2. Blanket hanging down, causing increased wind resistance.
3. Batteries too weak.
4. Baby leaning too far forward.
5. Baby too heavy or too active. (Discontinue use.)
6. Soft carpet (swings higher on hard floors).

Assembling Product

- 1 Make sure straps on mesh sides are not twisted. Snap seat back into smaller hole on mesh sides.
- 2 Snap seat bottom into large hole on mesh sides.
- 3 Check to make sure seat bottom and seat back are securely snapped into mesh sides by pulling on the base of mesh sides.
- 4 See image
- 5 See image
- 6 See image
- 7 Insert plastic tab into bottom slot on the side of the seat back. Attach tab to hook on back of seat. Repeat on the other side.

Attaching Legs

- 8 See image
- 9 Swing the legs outward until the single button snaps into its notch. CHECK that the legs are properly attached by twisting them in the housings.

Rear Tube

- 10 See image
- 11 CHECK that legs are properly attached by twisting them in the housing.

Front Tube

- 12 CHECK that legs are properly attached by twisting them in the housing.
- 13 See image

Attaching Seat to Frame

- 14 Snap swing seat into brackets as shown. Pull down on swing arms to make sure it is securely snapped into handles.
- 15 Attach elastic loop on mesh sides, to plastic hook on bottom of handle. Repeat on other side of swing.
- 16 See image

To Secure Child

See images 17 - 21

- 22 Use slide adjuster at shoulder and waist for further adjustment. Repeat on other side.
- 23 When changing harness strap slots, MAKE SURE harness straps are going through same slots in seat pad and seat back.
- 24 The harness straps must go into the slot that is even with or slightly above the shoulders. Avoid twisting straps.

To Adjust Recline

See images 25 - 26

Press in both recline latches on back of seat to lower. To raise, push seat back up to desired position.

Installing Batteries

- 27 With baby out of swing, open the battery compartment lid by inserting a key into the slot. Insert four "C"-LR14 (1.5V) cell batteries. Replace battery lid.

CHECK that the batteries are put in correctly. Your swing will not run if the batteries are put in backwards. Refer to the warnings section for safe battery use.

Starting Product

WARNING: avoid serious injury from falling or sliding out. Always use harness. After fastening buckles, adjust belts to get a snug fit around your child.

Observe the swinging motion for a minute. It takes time for the product to adjust to a setting. Change setting if needed.

A small, quiet baby will swing higher on each setting than a larger, more active baby.

Your seat may be stopped at any time the motor is running without damaging the motor. Push product to restart.

If your product motor stops operating by itself, a protective device may have been activated. Turn off motor, wait three minutes, then restart swing.

On/Off

See images 28 - 29

Storage

See images 30 - 31

Toy bar

See images 32 - 33

- 33 Check to make sure toy bar is secure by pulling on it.



UK Graco consumer Services
Newell Rubbermaid
Graco Children's Products
Halifax Avenue
Fradley Park
Lichfield WS13 8SS
United Kingdom
44844 412 1212

Graco Continental Europe
Newell Rubbermaid Luxembourg SARL
1 rue Edmond Reuter
L-5326 CONTERN
Luxembourg

www.gracobaby.eu www.graco.co.uk

