

mothercare



atlanta  
highchair

user guide

IMPORTANT  
KEEP FOR FUTURE REFERENCE

## 1

## introduction

The atlanta is a practical, easy to clean highchair featuring a wipe clean seat unit, removable, washable harness, wipe clean outer tray with a removable, washable inner tray. It also features an adjustable height footrest for growing children and folds flat for easy storage.

Suitable for when your baby starts to eat solid food and can sit unaided (around six to nine months).

Designed and tested to comply with British Standard BS 5799 : 1986.




## 2

## parts checklist

Please do not discard any packaging until you are sure you have all the parts and have finished assembling the highchair.

A medium sized Philips screwdriver is required for fitting the tray.

## diagram

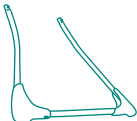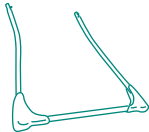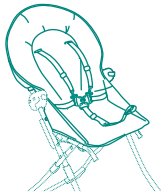

## description

seat unit

footrest


trays (1 fixed, 1 removable)

4 tray fixing screws  
and washers


front legs (wide)

rear legs (narrow)

## opening the highchair

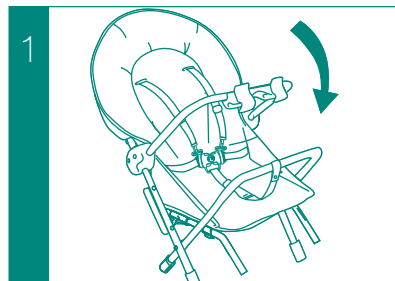


Open the seat frame and lower the tray support bar as shown.

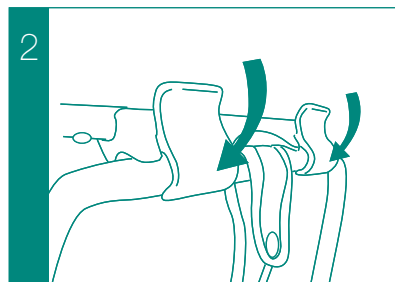

Wrap the crutch strap around the lower bar and fasten the press stud.

Fasten the clips around the lower bar by pushing the tabs on the clips to lock the tray bar into place.

## fitting the legs

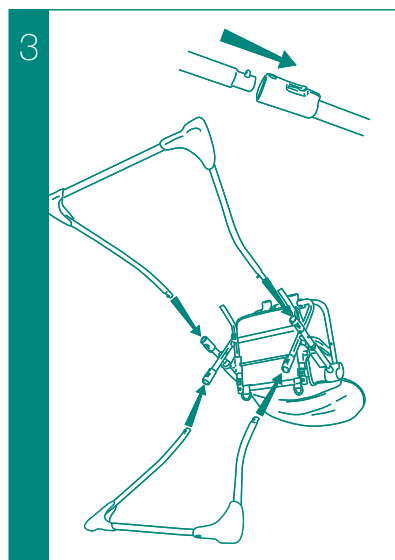


The front and rear legs are a different widths.

Align the silver buttons on the legs with the guide slots and holes in the seat frame tubes. When correctly assembled the buttons will fit through these holes.

Push the legs a little way into the seat frame tubes. Continue pushing until the silver buttons appear through the holes.

Check the legs are secure before using the highchair.

## fitting the trays

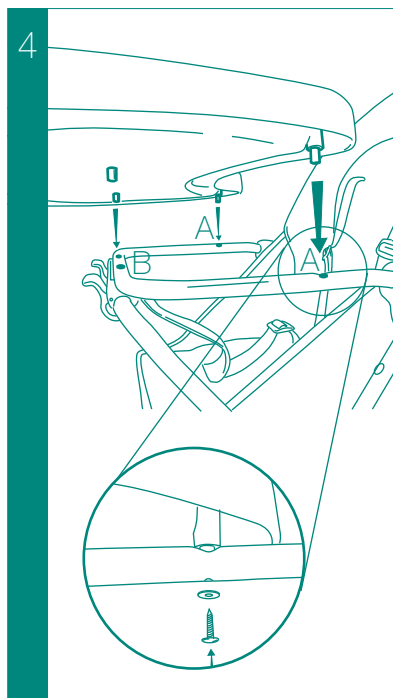

Locate the 4 plastic pegs on the underside of the fixed tray into the holes in the tray support bar.


Fit the plastic washers onto the screws.

Using a medium sized Philips screwdriver, fit the two rear screws (A) through the tube and into these pegs.

Release the two clips, raise the tray and support frame, and insert the two front screws (B).

Before use, check the final assembly.

## fitting the footrest

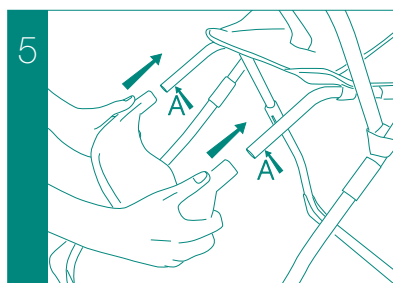


Line the footrest up with the legs in front of the seat.

Press the two silver buttons 'A' behind the legs, and slide the footrest on.


There are 3 height settings for the footrest. Select the most appropriate for your child.

Before use, check the footrest is secure by pressing down on it.

## harness

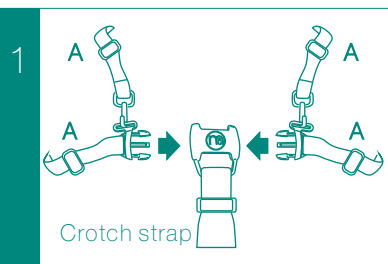

To fasten  
Insert both fasteners securely into the clasp.  
Adjust each strap length with adjusters A.

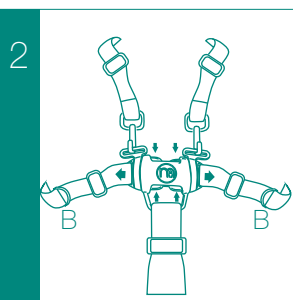


To release  
Press the fastener prongs and pull apart.

'D' rings (B) are provided for fitting a separate harness complying with BS 6684.


Your child should be securely harnessed at all times and should never be left unattended, even for short periods.

## removing the harness for washing

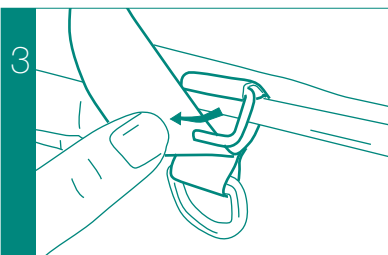

The shoulder and waist straps are removable for washing.  
Release the ends of the straps from the front buckle.


Release the ends of the waist straps by sliding the webbing out through the slits in the metal rings.

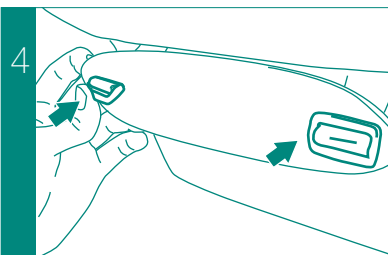

Release the shoulder straps by passing the ends through the plastic load pad and pulling through the backrest.

When re-fitting the harness ensure the ends are correctly and securely fixed before putting your child in the highchair.


### adjustable footrest

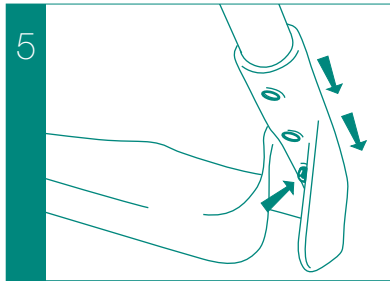

The footrest can be adjusted to any of 3 positions to suit the height of your child.

To adjust the position, press both silver buttons at the back of the footrest, adjust to the required height, and release the buttons, ensuring they are correctly located in the holes in the footrest.

### removable tray

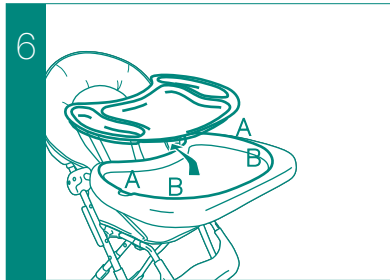

Grip the tray at the finger recesses 'A' and lift the tray out.

To clean the removable tray: -  
Wash in warm soapy water. Rinse and dry thoroughly before use; or  
Place in the top rack of a dishwasher.  
Note that repeated cleaning in a dishwasher may cause the tray to lose its gloss finish.

When re-fitting, ensure the edges are fully located under the tabs 'B' in the outer tray.

## folding

1



To fold the highchair, release the two clips under the tray by pushing the tabs up.

Lift the tray.

Close the highchair by pushing the legs together.

2




Note: As the chair is folded you will notice some resistance as the footrest passes the legs. This is normal and helps keep the chair folded.

Once the chair is flat, fold the tray down.

## to take apart (for transportation or long term storage)

3

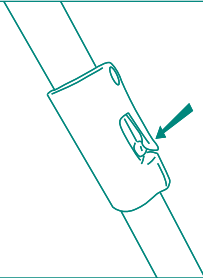

The legs can be removed by pressing the silver buttons inwards and easing the legs off.

The trays can be removed by removing the four screws underneath.

Take care not to lose any of the parts if the highchair is taken apart.

- The highchair can be cleaned by sponging with warm water and a mild detergent. A mild disinfectant may be used.
- The shoulder and waist straps can be removed for washing as described in section 4. Hand wash or machine wash at 40°C.
- Stubborn marks may be removed with a non-abrasive cream cleaner. Never clean with abrasive, ammonia based, bleach based or spirit type cleaners
- Moving parts may be lubricated with a light silicone oil.

- **WARNING! YOUR CHILD'S SAFETY IS YOUR RESPONSIBILITY.**
- Use only on a level stable surface.
- The highchair must be fully open and locked before placing a child inside.
- Ensure your child wears a correctly fitted and adjusted harness at all times.
- For extra safety, D-rings are provided for a separate safety harness approved to BS 6684.
- Do not place close to any source of heat.
- Keep away from trailing cords flexes, electric irons, ornaments and other such hazards.
- Do not move the highchair with a child inside.
- Regularly check the locks and fittings for security.
- Check all parts for wear and replace as necessary.
- Do not use if any part is broken, damaged or missing.
- Do not use replacement parts or accessories other than those approved by Mothercare as they may make the highchair unsafe.
- Store the highchair away from children when not in use.
- If the highchair is used by someone unfamiliar with it e.g. grandparents always show them how it works.
- Never leave your child unattended, even for the shortest time.



your child's safety is your responsibility

if you have a problem with this product or require replacement parts, please contact your nearest Mothercare store or telephone the mothercare customer care line on 08453 30 40 30.

alternatively write to:

Customer care  
Mothercare  
Cherry Tree Road  
Watford  
Herts. WD24 6SH

[www.mothercare.com](http://www.mothercare.com)