



bounce about door baby bouncer user guide



mothercare

Cherry Tree Road
Watford, England, WD24 6SH
www.mothercare.com

Mothercare customer careline on 08453 304030


IMPORTANT! KEEP FOR FUTURE REFERENCE

This bouncer complies to BS EN 14036:2003 when fitted as instructed

This bouncer is suitable for a child that can support its head unaided, and may be used until they can walk and up to a maximum weight of 12kg (26.4lb). Not suitable for babies under 3 months of age.


installing your door baby bouncer

fig 1

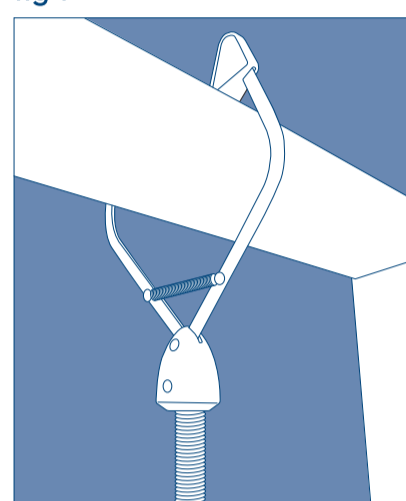

This bouncer has been designed to be used in an interior door way only. The wall must be at least 10cm (4") thick and no more than 17cm (6 3/4"). The Door frame must have a permanent, secure architrave with a flat strong section at the top at least 1.5cm (1/2") wide. Attach the clamp to the door frame as shown by opening the clamp arms and hooking them over the door frame. **DO NOT USE WHERE THERE IS A WINDOW ABOVE THE ARCHITRAVE**


fig 2

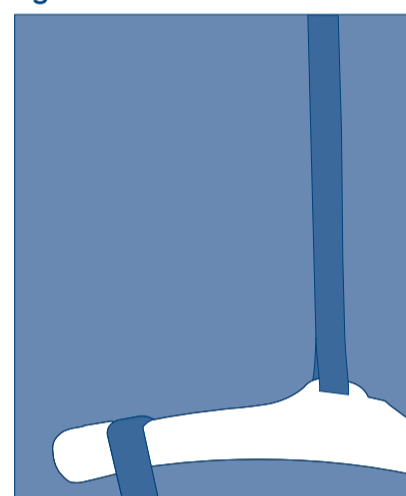

To avoid potential injury, refer to the following installation guidelines each time you use the bouncer:


1. Pull down firmly on the strap underneath the hanger. If there is any movement of the strap or the clamp you should not use the bouncer in that doorway.
2. Always ensure that the strap is in good condition. Do not use if there is any damage or fraying.
3. **WARNING!** Ensure the door cannot close on the baby bouncer.

fig 3

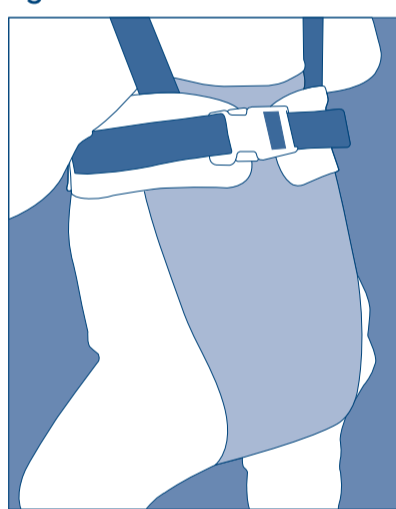


Once you are happy with the installation of the clamp and hanger, it is time to put your baby into the bouncer. The easiest way is to put your baby into the seat before you attach the seat to the hanger. The seat has a specially designed foam section at the bottom and straps to secure it. Sit your baby on your knee and tighten the velcro straps and back buckle on the seat. Move over to the bouncer and kneel down on one knee. Supporting your child on your raised knee, attach the straps to the hanger.

fig 4

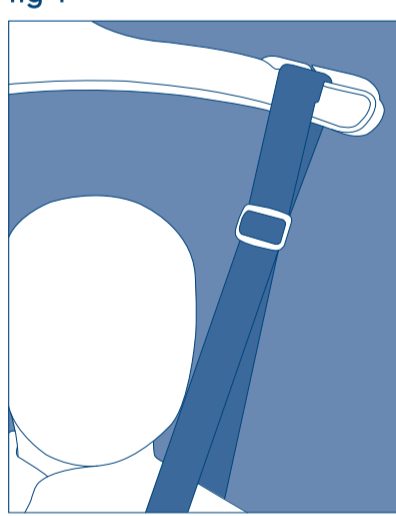

Secure your baby in the seat, by tightening the velcro straps and then fastening the back buckle. Adjust the buckle straps to suit your baby. Please ensure the seat is a safe and snug fit on your baby at all times. Loop the seat straps over the hanger and slide the straps under the plastic clips. There are adjusters on the straps. Position these approximately 10cms (4") above your babies shoulders for comfort.

fig 5

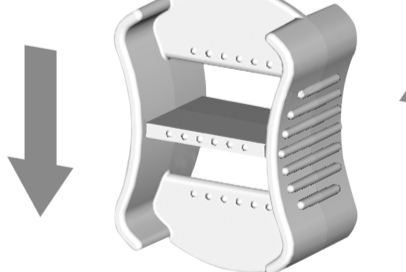

Once your baby is safely in the seat, you may have to adjust the main strap length to allow your baby's toes to just touch the floor. If only one adult is present, you may have to remove your baby from the seat. If two adults are present, one should carefully lift the seat while the other adult adjusts the strap. You will have to make this adjustment with time, as your baby grows.

safety notes

- **WARNING! NEVER LEAVE YOUR CHILD UNATTENDED!**
- **MOTHERCARE RECOMMEND THAT YOUR BABY SHOULD ONLY BE IN THE BOUNCER FOR A MAXIMUM OF 20 MINUTES AT A TIME**
- **WARNING! DO NOT USE THE BABY BOUNCER AS A SWING!**
- **WARNING! ENSURE THE BABY BOUNCER IS POSITIONED CENTRALLY IN THE DOOR FRAME**
- **ENSURE THE BABY BOUNCER IS ASSEMBLED BY AN ADULT**
- **ENSURE YOUR BABY IS ALWAYS CORRECTLY AND SAFELY POSITIONED IN THE BOUNCER SEAT**
- **BE CERTAIN THE CLAMP IS SECURELY FASTENED TO THE DOORWAY BEFORE EACH USE**
- **ONLY USE INTERNAL DOORWAYS WITH STRONG SECURE DOOR FRAMES**
- **DO NOT ALLOW YOUR BABY TO SLEEP IN THE BOUNCER**
- **DO NOT USE ANY SPARE PARTS ON THE BOUNCER UNLESS THEY HAVE BEEN SUPPLIED BY MOTHERCARE**
- **ALWAYS REMOVE THE BOUNCER FROM THE DOORWAY WHEN IT IS NOT IN USE TO PREVENT ENTANGLEMENT IN THE STRAPS**
- **DO NOT ALLOW OTHER CHILDREN TO PLAY NEAR THE BOUNCER WHEN IN USE**
- **TO AVOID POTENTIAL INJURY YOU SHOULD INSPECT THE BOUNCER EVERY TIME YOU USE IT**
- **WARNING! ENSURE THE DOOR CANNOT CLOSE ON THE BABY BOUNCER**

cleaning your door baby bouncer

The seat on your bouncer is washable. Remove the seat and machine wash on a low temperature (30°C) and drip dry, do not tumble dry. Wash separately. We recommend you wash the seat before you use it the first time. The plastic sections of the bouncer can be cleaned with a damp cloth. Do not use abrasive cleaners on the plastic sections.

