


mothercare

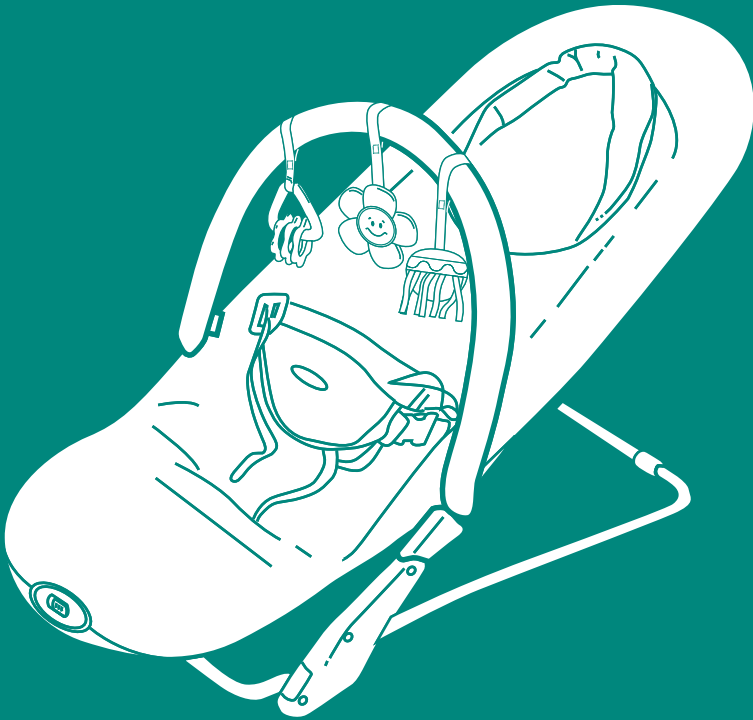

denim brights
bouncing cradle




user guide

WARNING - Important
Keep for future reference

This bouncing cradle is designed for babies who cannot sit up by themselves (up to 9 months / 9kg approximately). The cradle features hanging toys for your child's entertainment, and a soothing vibration unit.

Warning! - Do not use once baby starts to sit up unaided, and never pick the cradle up by the toybar.

diagram

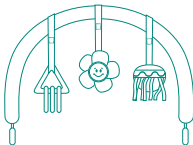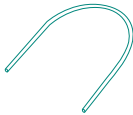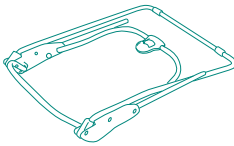

description

Base frame with vibration unit

Backrest frame

Seat cover

Head support cushion

Toybar and toys

Note: If you wish to use the vibration feature right away, please install the batteries in accordance with section 6 prior to assembly.

1




Pull bar (A) right around until it locks into place against the hinges.

Next, lower the footrest frame.

When fully open, the frame will look as shown in diagram 2 below.


2

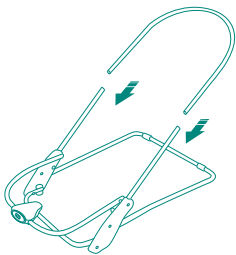

Place the frame on the floor with the open tubes pointing upwards.

Insert the ends of the backrest frame into these open tubes. The retaining buttons will 'click' through holes in the lower tubes when properly located.


3

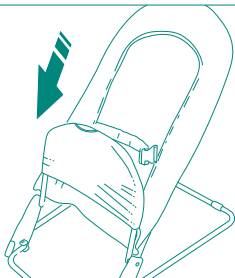

Lift the footrest frame to the upright position.

The seat cover has two 'sleeves'. Slide the larger of these over the backrest frame bar and the smaller sleeve over the footrest frame.


4

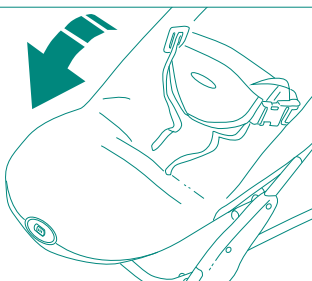

Press the footrest down towards the floor until it locks into place, holding the seat cover taut.

attaching the toybar


5

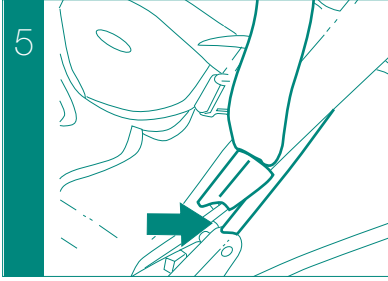

When attaching the toybar to the cradle, ensure the toybar frame points upwards (not forwards), and fit the clips to the frame just above the plastic hinges.


head support cushion

6

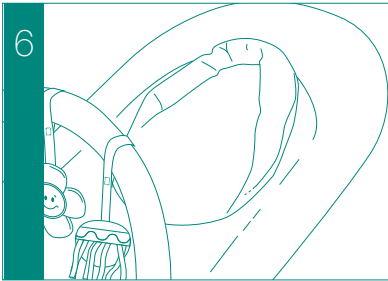


The head cushion is provided to give support to your child's head while using the bouncing cradle. Position so it fits snugly behind your child's head.


the harness

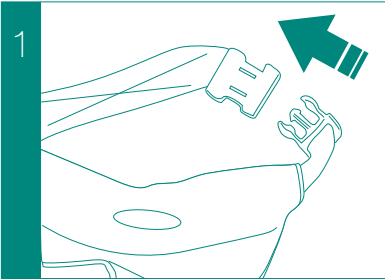

To secure your child in the harness, place the crotch strap between their legs and insert the harness prongs into the buckle, making sure the child's fingers are clear.

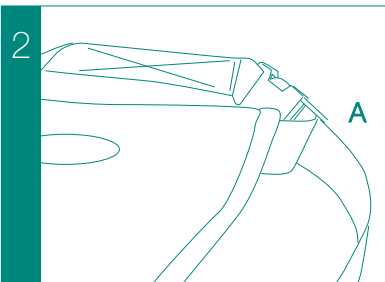


Adjust the strap adjuster (A) to get a snug fit around your child.

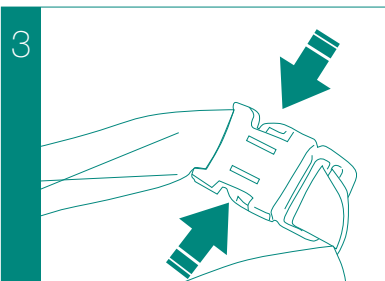


To release the harness, squeeze the buckle prongs together.

1

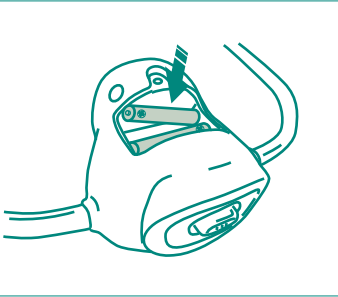


The vibration unit should be fitted with batteries before use (refer to section 6, battery installation & replacement).

2

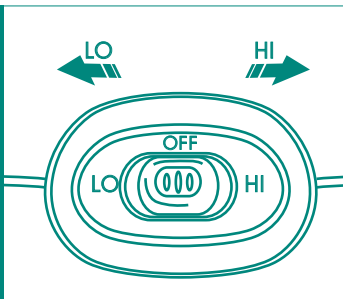

Switch the vibration unit on by sliding the switch to "HI" or "LO" for the preferred level of vibration.

3

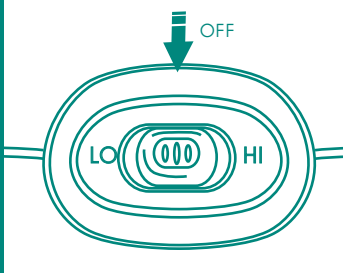

Switch the vibration unit off by sliding the switch back to the middle "OFF" position.


A Philips head screwdriver and 2 X "AA" batteries are required (not included)
Only the recommended batteries or equivalents are to be used.
Do not use rechargeable batteries.

1




Lift the footrest up and pull the fabric cover upwards to expose the vibration unit.

2

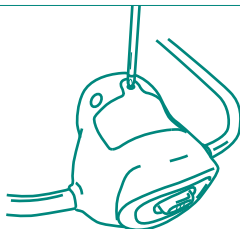

Open the battery cover with a small headed Philips screwdriver.


3

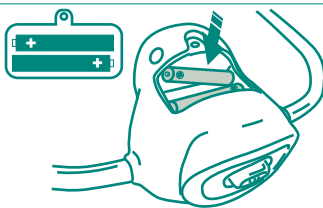

Install batteries as indicated, making sure the batteries are installed with the correct polarity.

Do not short circuit the battery terminals.

4

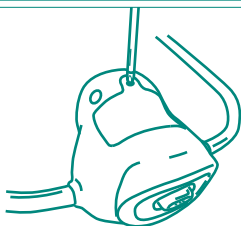

Close the battery cover with the screwdriver.

5




Read battery safety guidelines carefully before use.

ALWAYS



Take care to fit your batteries correctly, observing the plus and minus marks on the battery and vibration unit.

ALWAYS

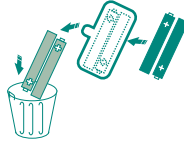

Replace the whole set of batteries at one time, taking care not to mix old and new batteries or batteries of different types.

ALWAYS



Store unused batteries in their packaging and away from metal objects which may cause a short circuit.

ALWAYS




Remove dead batteries from equipment and all batteries from equipment you know you are not going to use for a long time.
Las pilas pueden perder líquido y resultar perjudiciales.

NEVER



Never dispose of batteries in fire as this may cause them to explode. Please put dead batteries in with the normal household waste.

NEVER

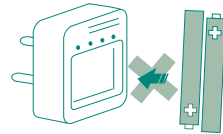


Never attempt to recharge ordinary batteries, either in a charger or by applying heat to them. There are special rechargeable batteries which are marked as such.

ALWAYS



Make sure battery compartments are secure.

1

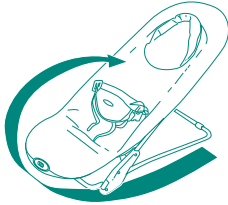


The cradle can be folded for storage. First remove the toy bar, then pull the base around to rest against the seat cover.

2



The footrest can also be folded up against the seat.

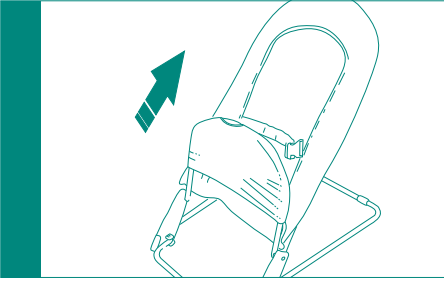


The seat cover can be removed for cleaning. Lift the footrest up then pull the whole seat cover off from the top. Wash in accordance with the care instructions printed on the back.

- Ensure that all metal parts are removed from cover before washing.
- Ensure the frame is correctly re-assembled before use, by following the instructions in section 3, preparation for use.
- Regularly check that the frame remains securely assembled and that the fabric and stitching is undamaged.

- **WARNING** - Never leave the child unattended in the cradle.
- **WARNING** - It is dangerous to put this cradle on an elevated surface, such as a worktop or bed.
- Do not use near an open fire or any other kind of heater.
- Keep children away from the cradle during set-up and when not in use.
- Never use as a child restraint in a vehicle.
- Never pick the cradle up with baby in it.
- Do not use near stairs or steps.
- Ensure the safety harness is fastened and correctly adjusted at all times.
- Regularly check for loose or damaged parts and discontinue use should parts become damaged or broken.
- Do not use once the child starts to sit up unaided.
- Never use the toybar as a carrying handle.
- Do not use replacement parts or accessories other than those approved by Mothercare as they may make the cradle unsafe.

The replacement parts listed below are available for your product. In the event that you require any of these parts please contact your local Mothercare store or contact Customer Care on 08453 30 40 30

diagram

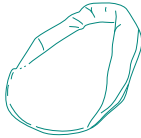

description

Seat cover

Head support cushion

Toybar & toys