

windermere
changing unit

user guide


important!
retain for future reference –
read carefully

Lay the parts out and compare to the PARTS CHECKLIST below. Do not discard and packaging until you are sure that you have all the parts.

This furniture is provided with an anti-topple device for securing to a wall. Failure to use this could result in the furniture toppling onto a child.

A Mothercare changing mat is recommended for use with this changing unit with maximum dimensions of 82cm x 48cm. Place the mat evenly between the top rails.

4 screws 7 x 50mm

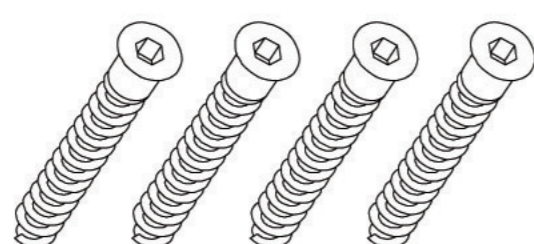


6 screws M6 x 14mm



4 screws M6 x 36mm




9 cross head screws 4 x 16mm

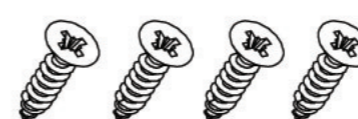


24 cross head screws 3 x 16mm




4 domed head screws M4 x 25mm

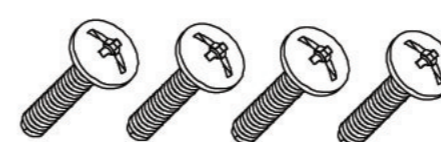


14 cams

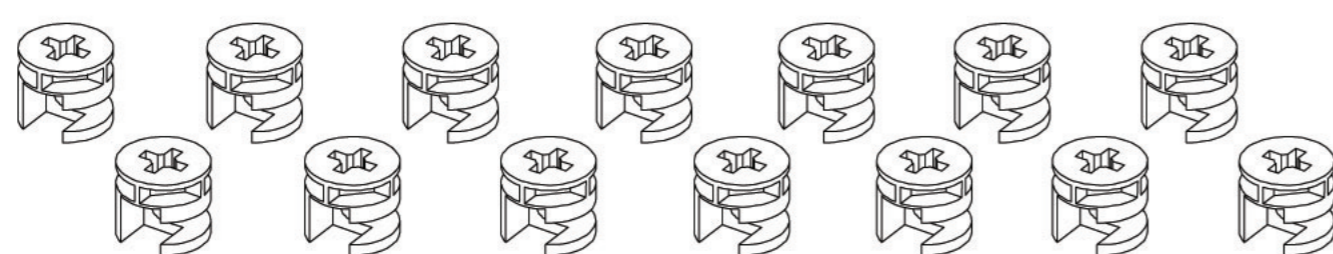

14 cam screws

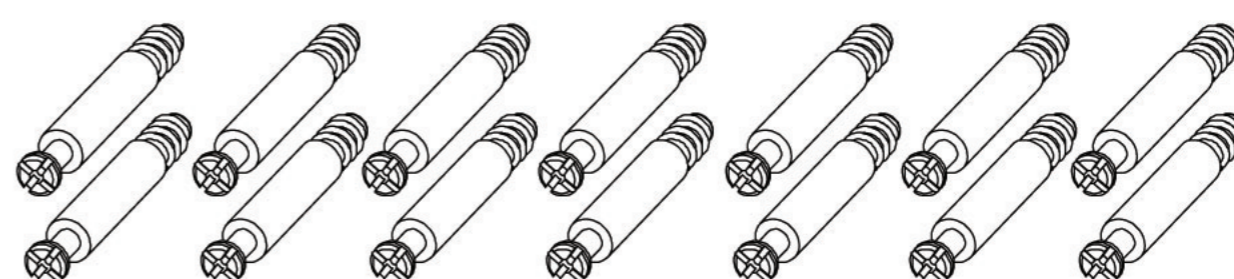


28 dowels

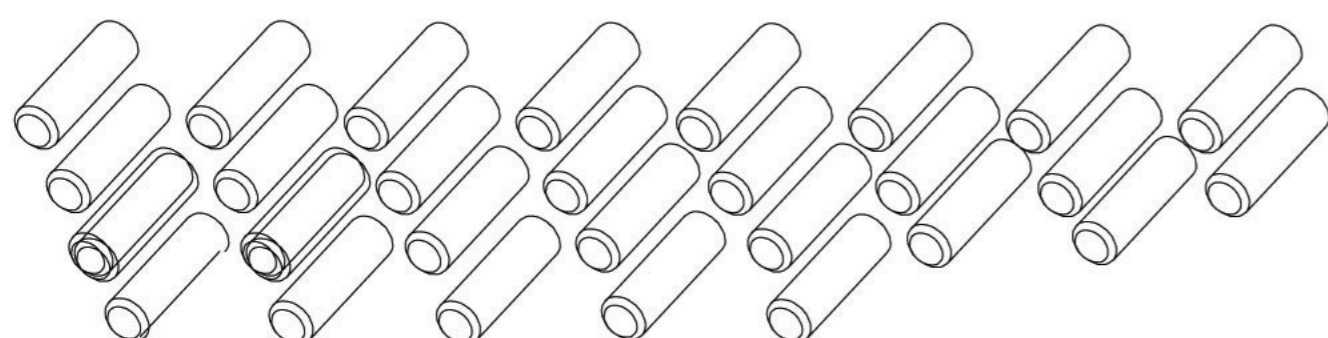


1 washer




1 strap

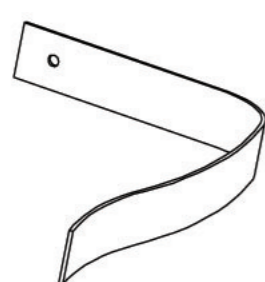


2 door stops

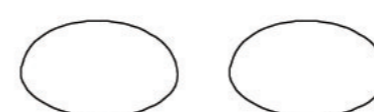


4 door handles

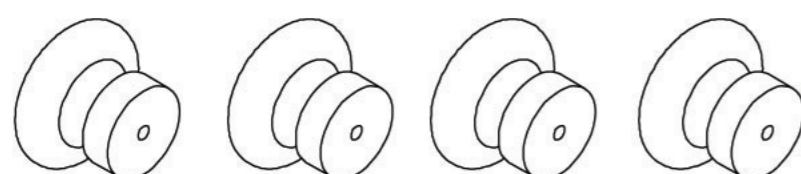


4 hinge plates

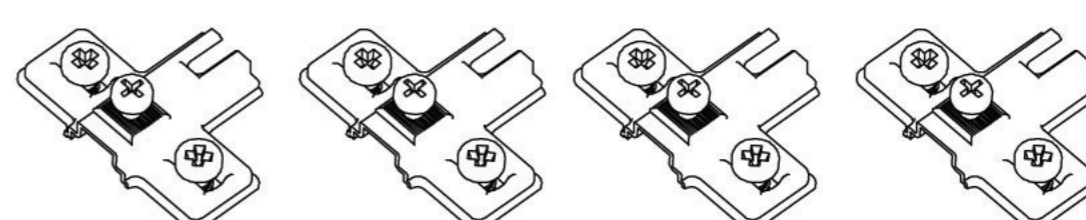


4 door hinges

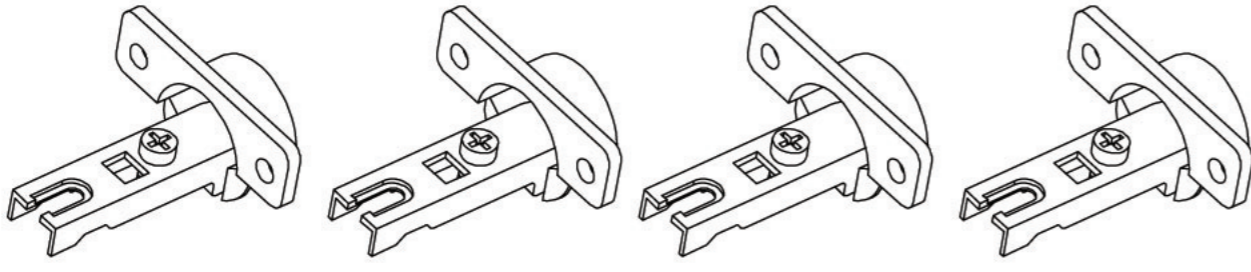


1 plastic strip

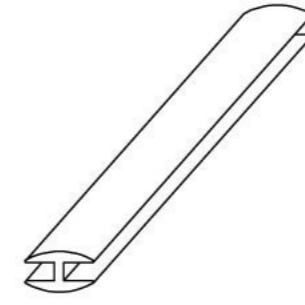


2 metal back plates

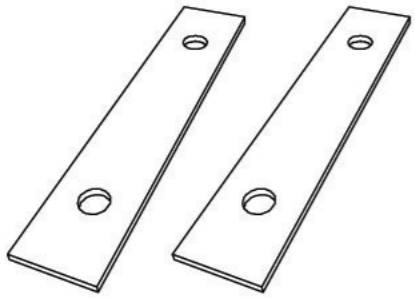


4 shelf lugs

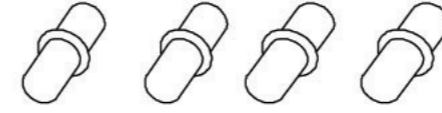


4 blanking covers

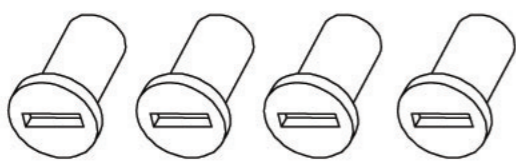


1 fascia

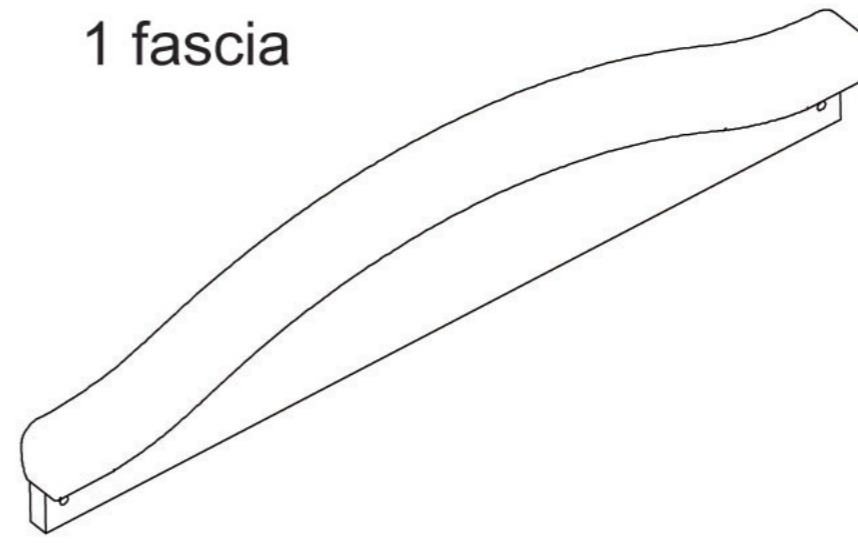


2 side rails (left and right)

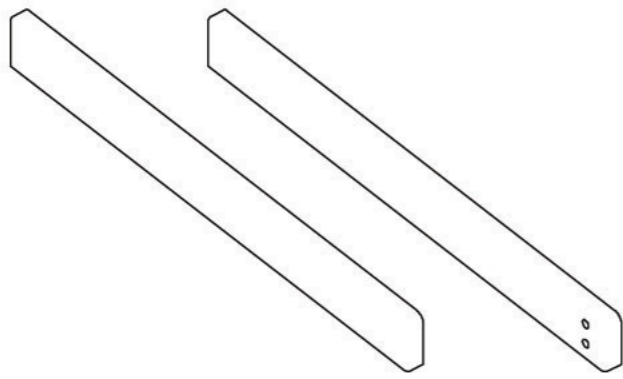


1 front rail

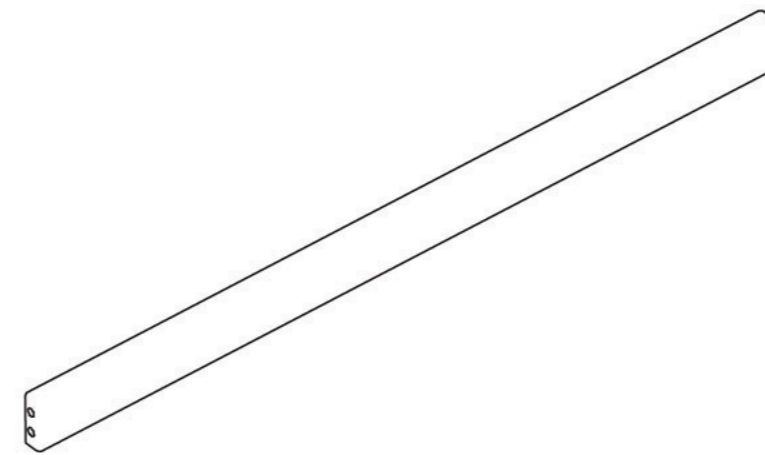


1 changing unit top

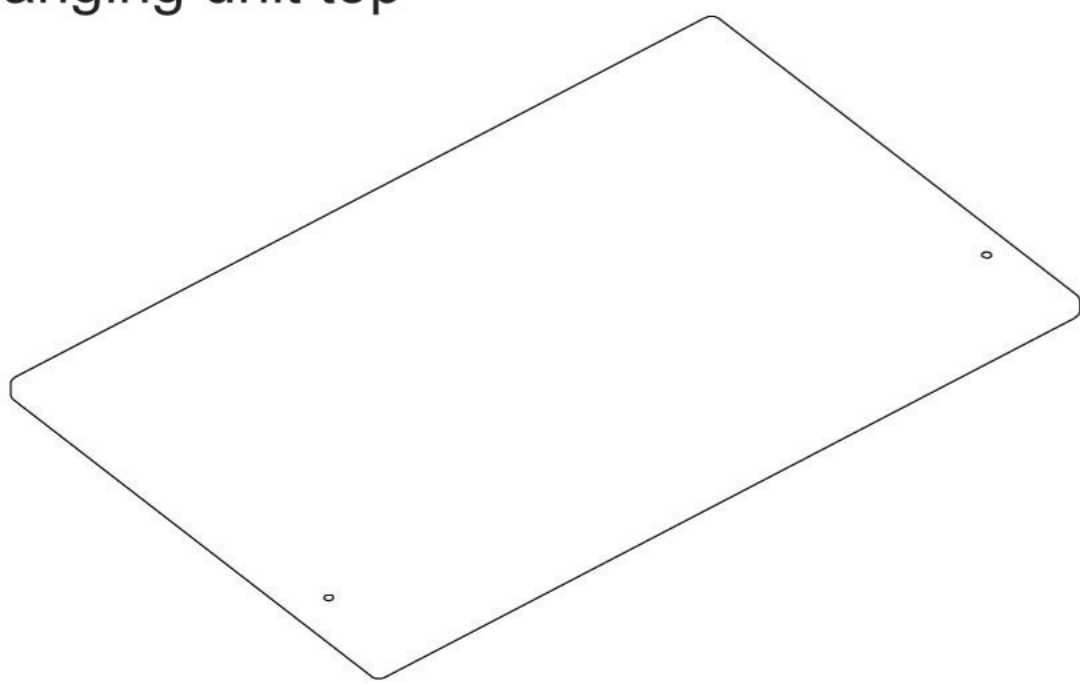


1 shelf

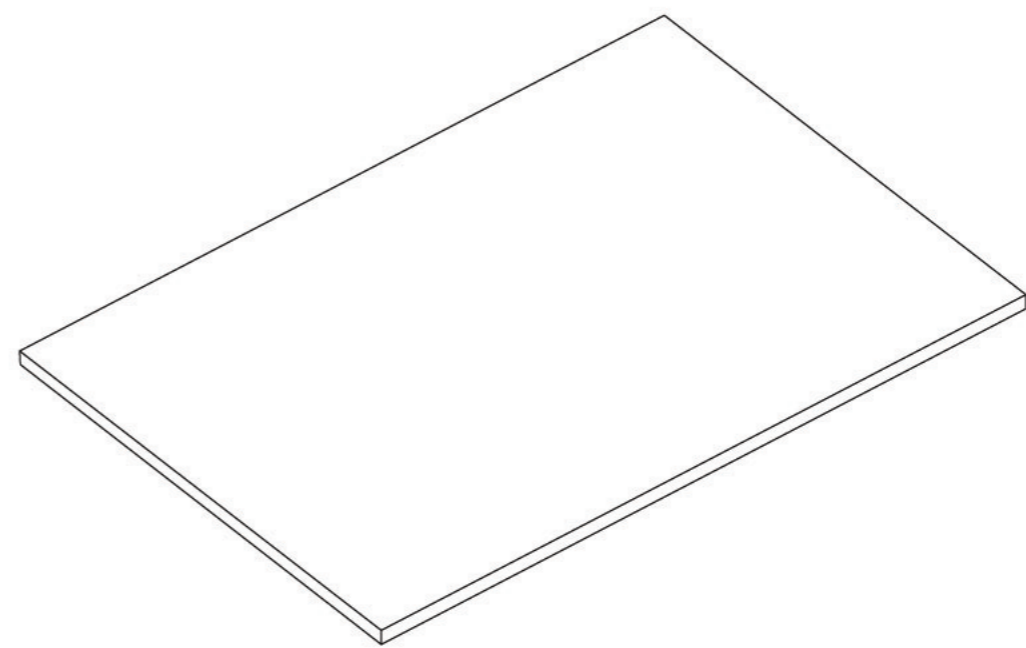


2 doors (left and right)

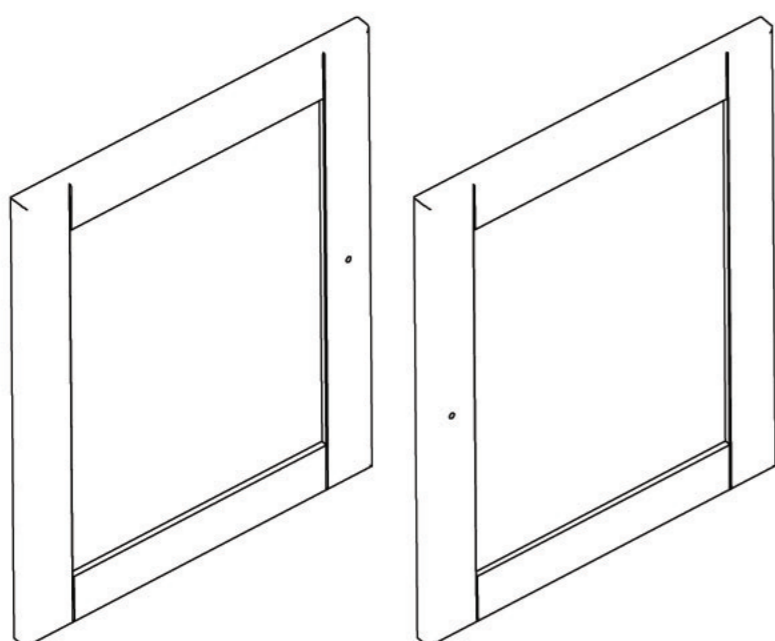


2 sides (left and right)

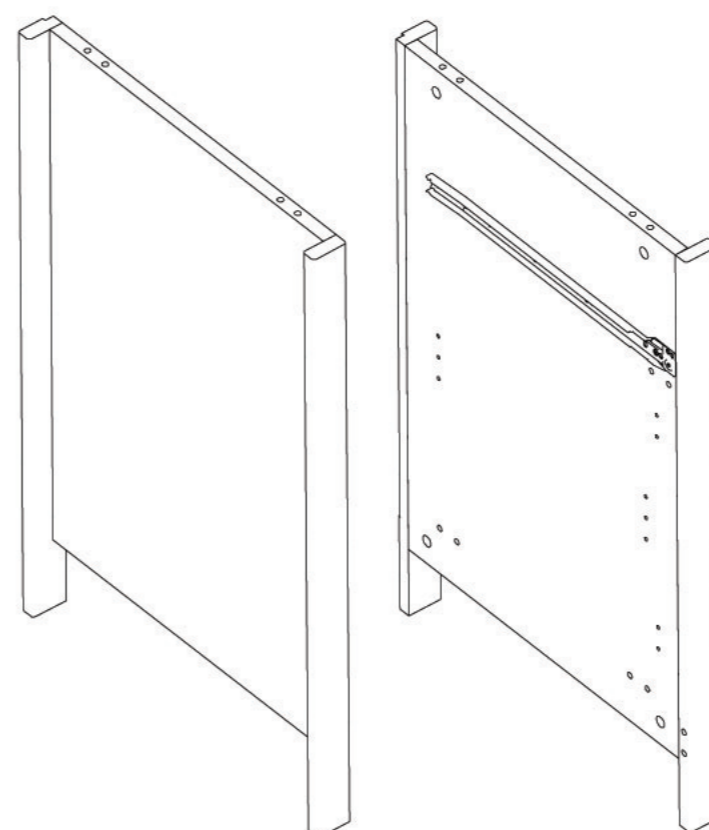


1 bottom rail

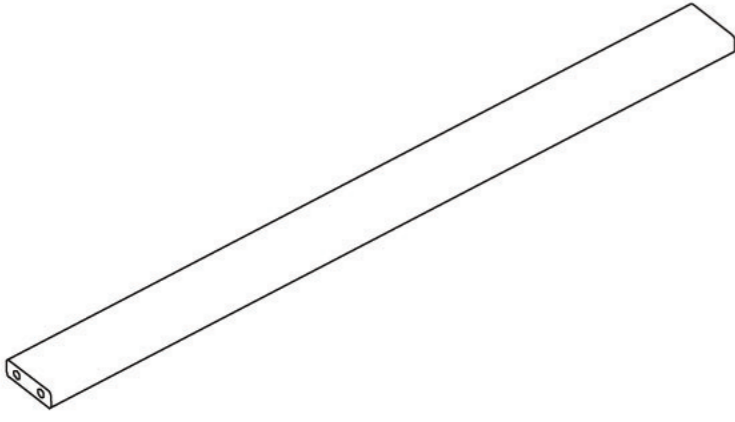


1 mid support rail

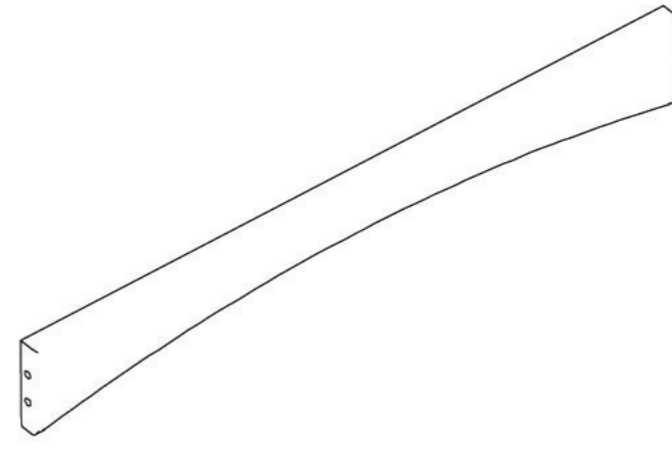


1 base shelf

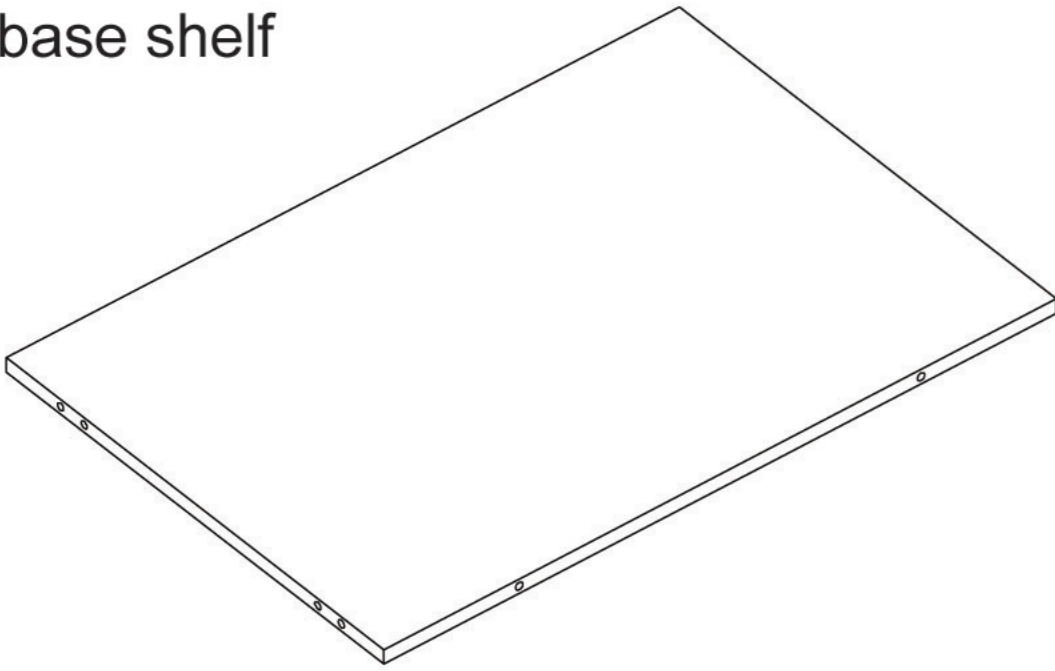


1 drawer base board

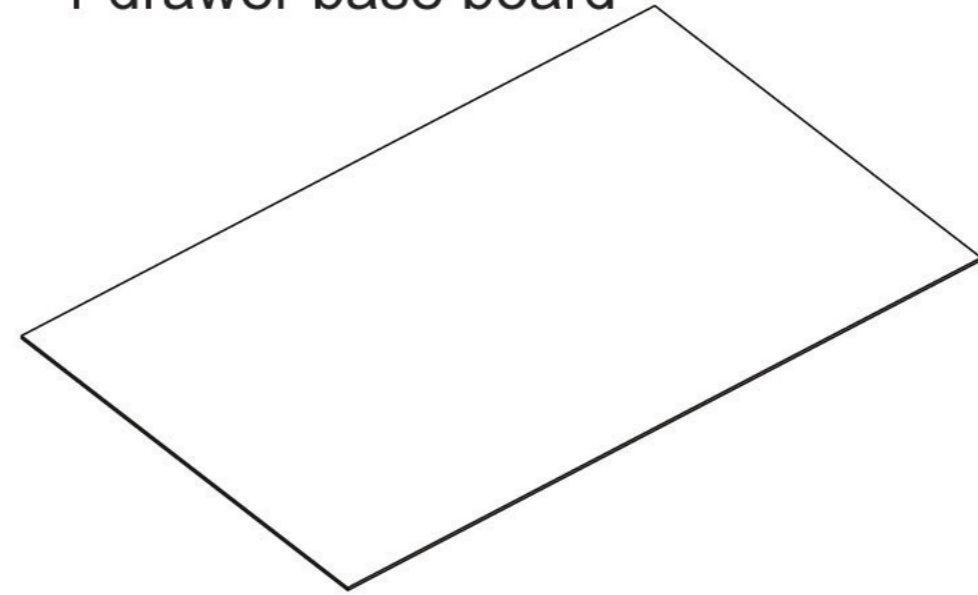


1 drawer front

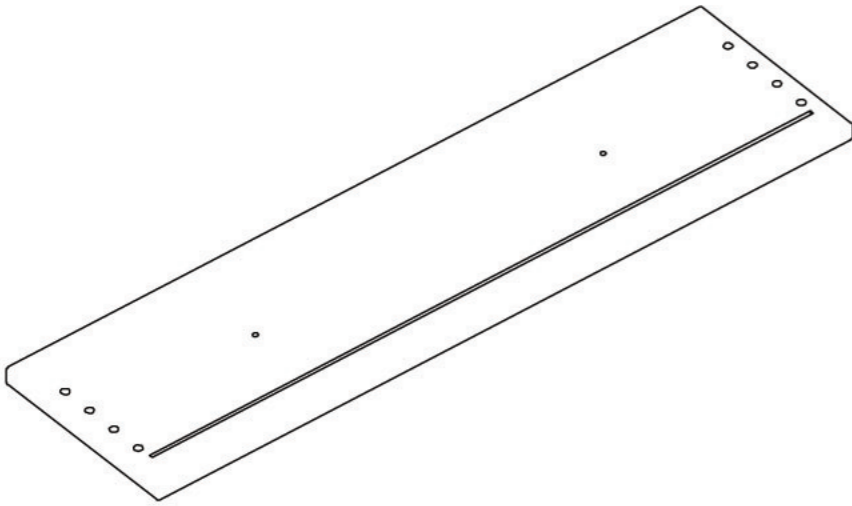


2 drawer sides (left and right)

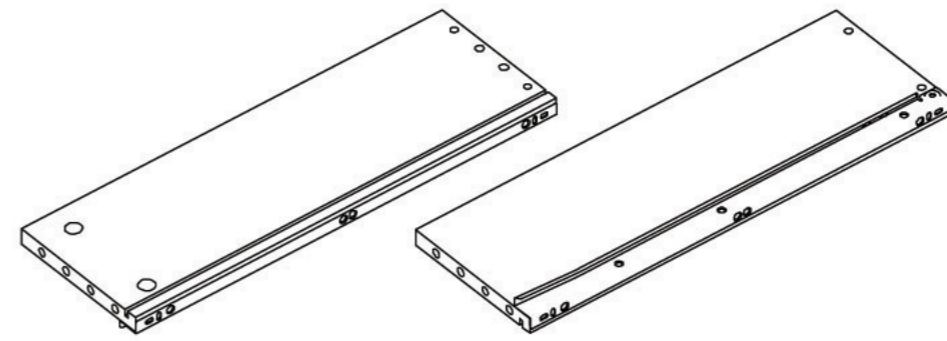

1 drawer backs

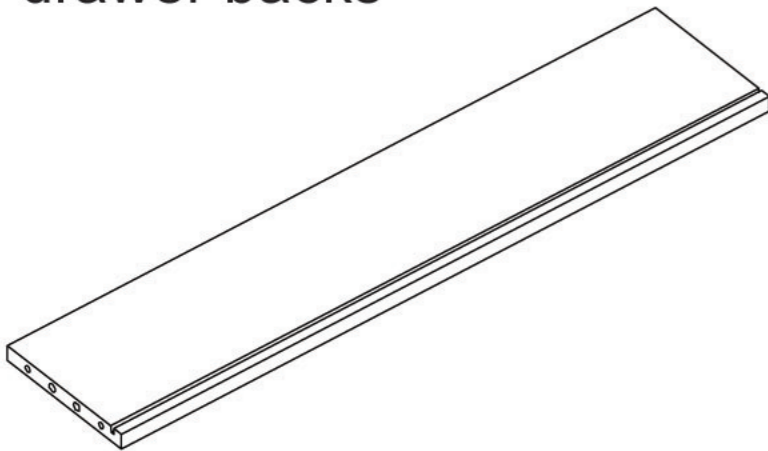

1 drawer base bottom

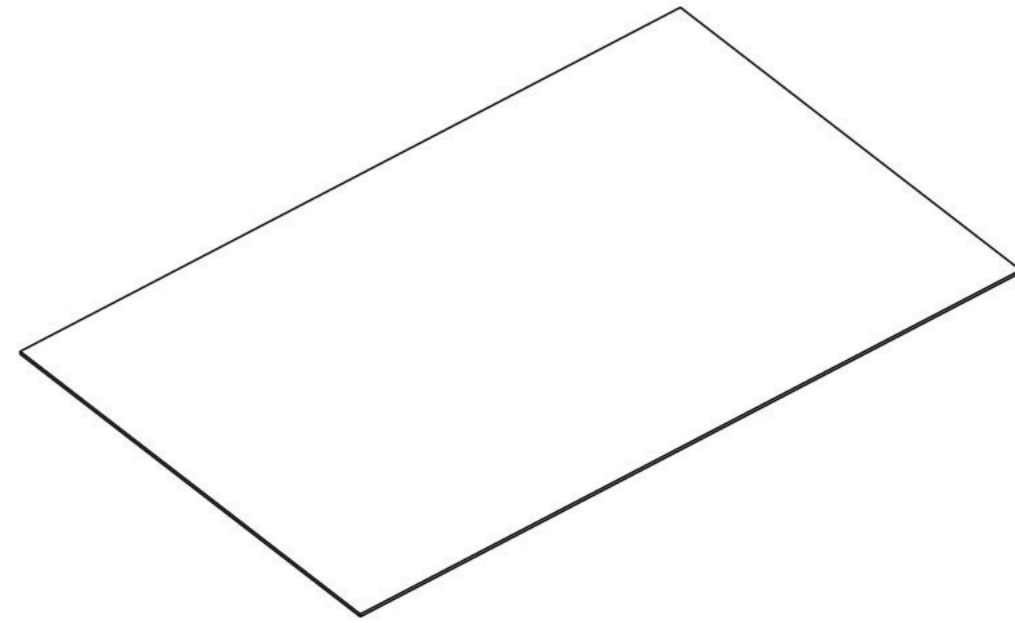**tools required:**

1 allen key (provided)




1 cross head screw driver



assembling the sides and base

1

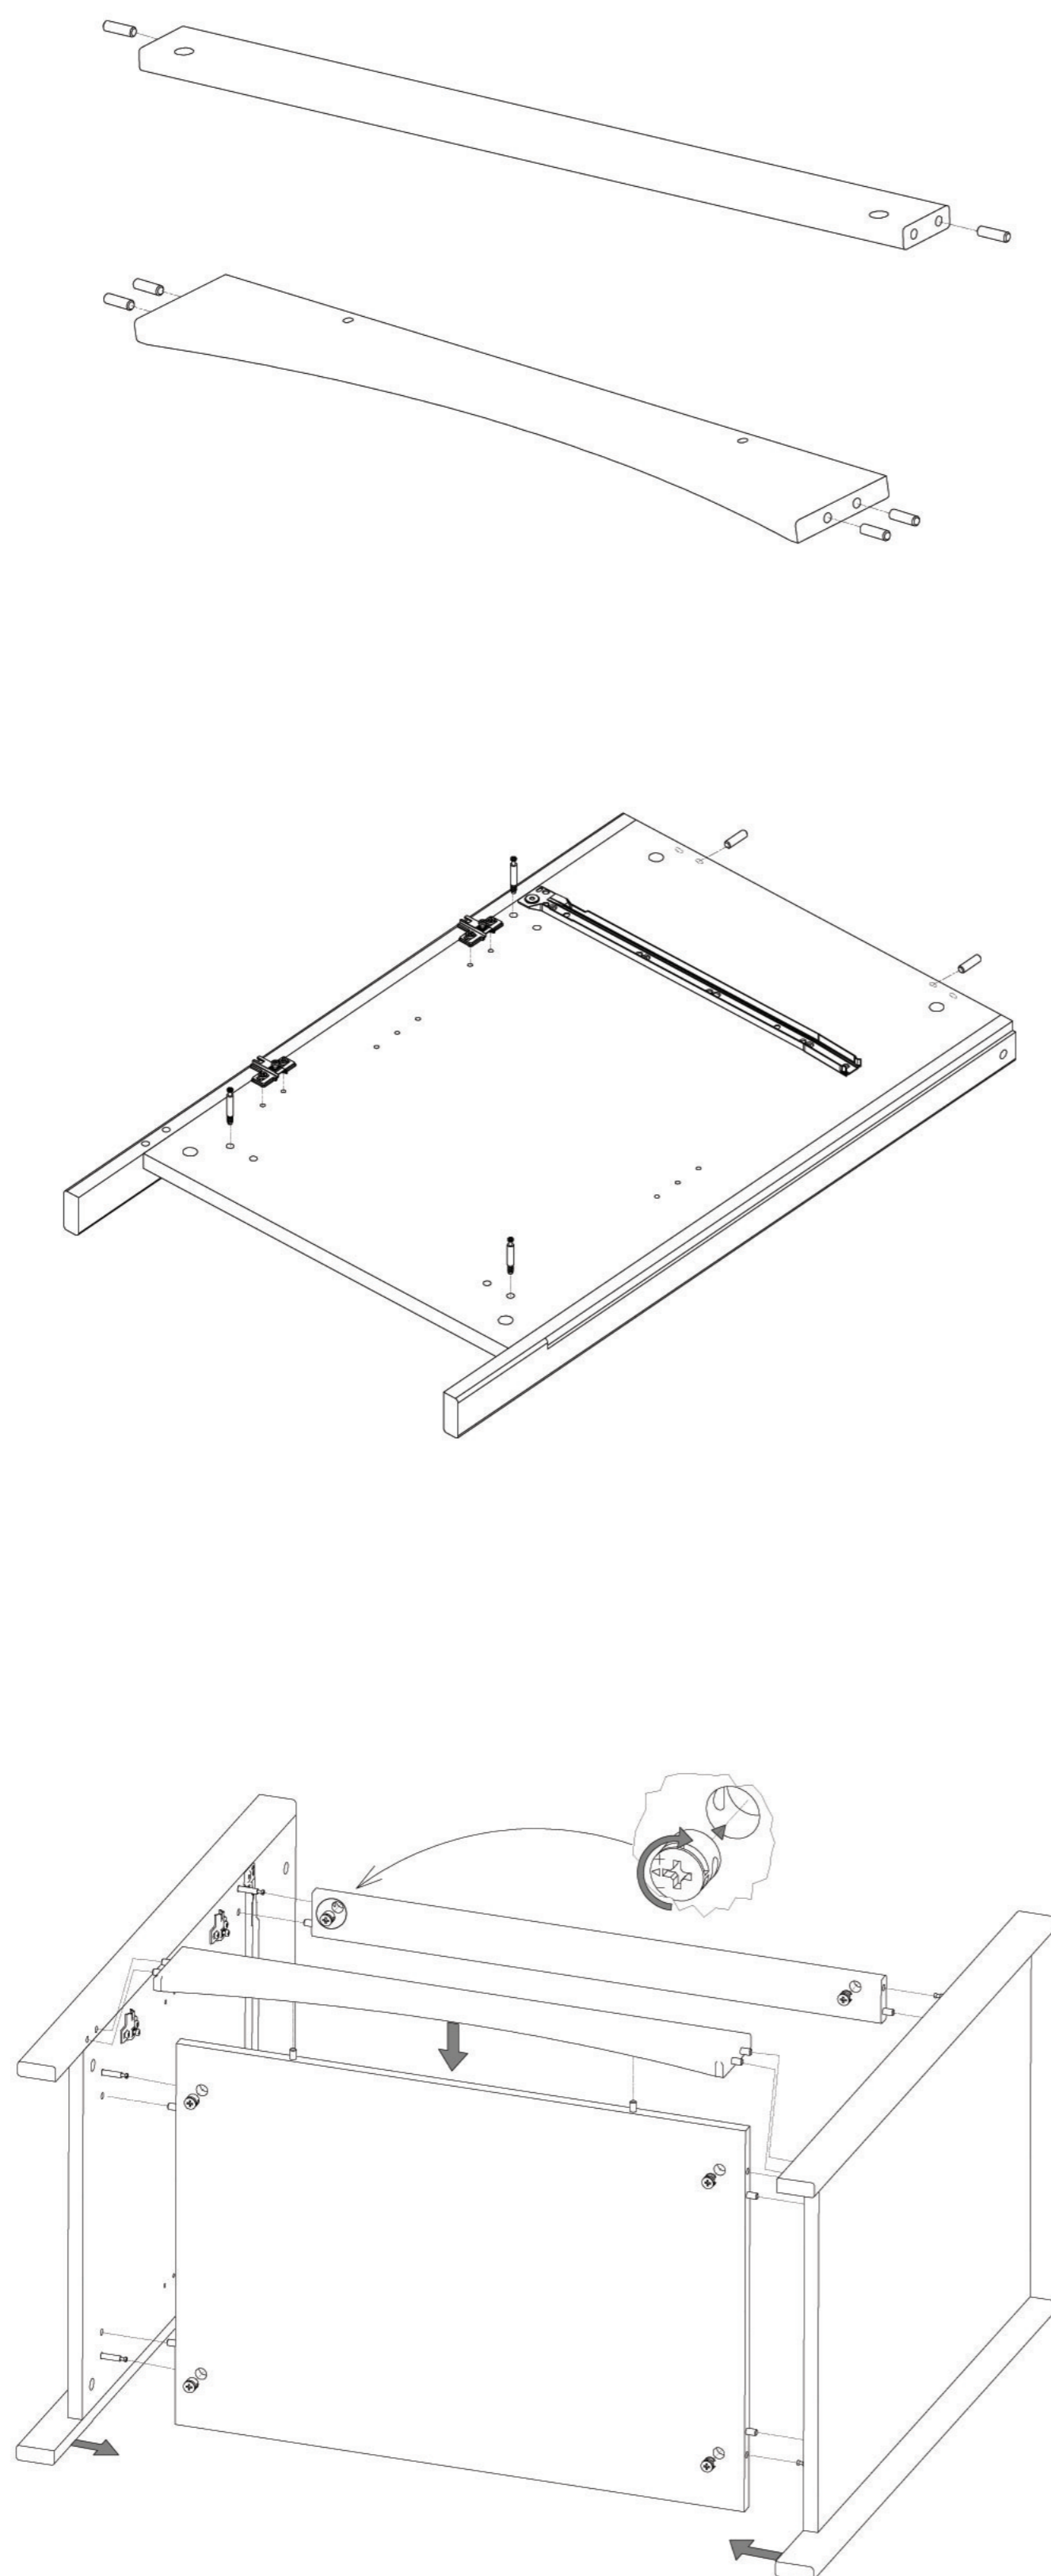

Insert 10 dowels into the bottom rail, mid support rail, left and right hand sides and base shelf.

Insert 6 cam screws in to the left and right hand sides.

Attach the hinge plates to the left and right hand sides.


Attach the bottom rail, mid support rail and base shelf to the sides by locating the dowels and cam screws in to their corresponding pre-drilled holes and pushing firmly into position.

Insert 6 cams in to their pre-drilled holes and lock in place using the cross head screw driver by turning these in a clockwise direction 180 degrees.

Please note that it is easier to carry out this step by laying one side flat, attaching the base shelf, bottom rail and mid support rail and locking with the cams then attaching the remaining side and locking this with the cams. Finally, upright in to it's correct position.

attaching the changing unit top

2

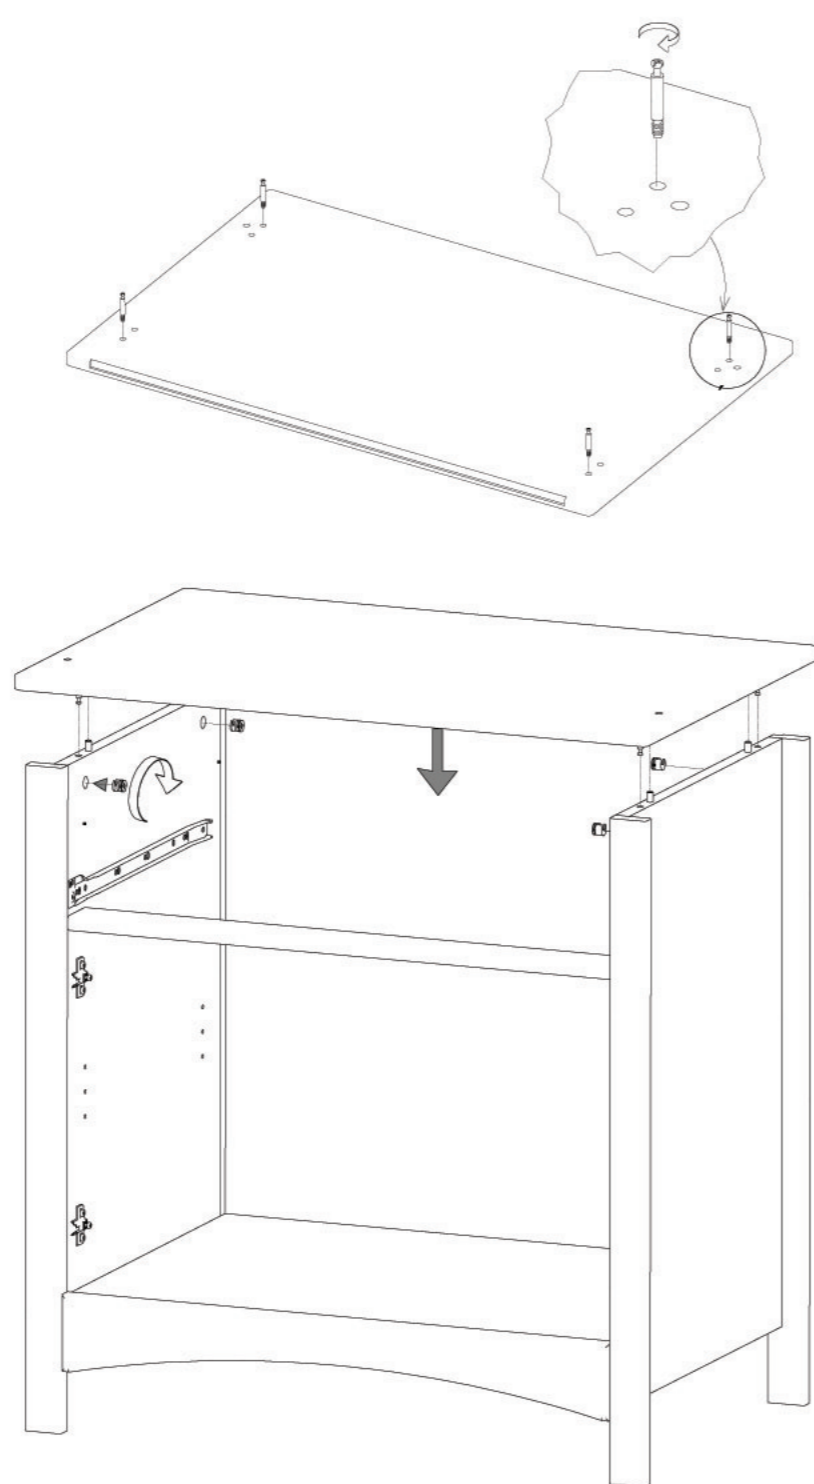


Insert 4 cam screws in to the changing unit top.

Attach the changing unit top to the sides by locating the dowels and cam screws in to their corresponding pre-drilled holes and pushing firmly into position.

Insert 4 cams in to their pre-drilled holes and lock in place using the cross head screw driver by turning these in a clockwise direction 180 degrees.

attaching the changing unit top rails

3

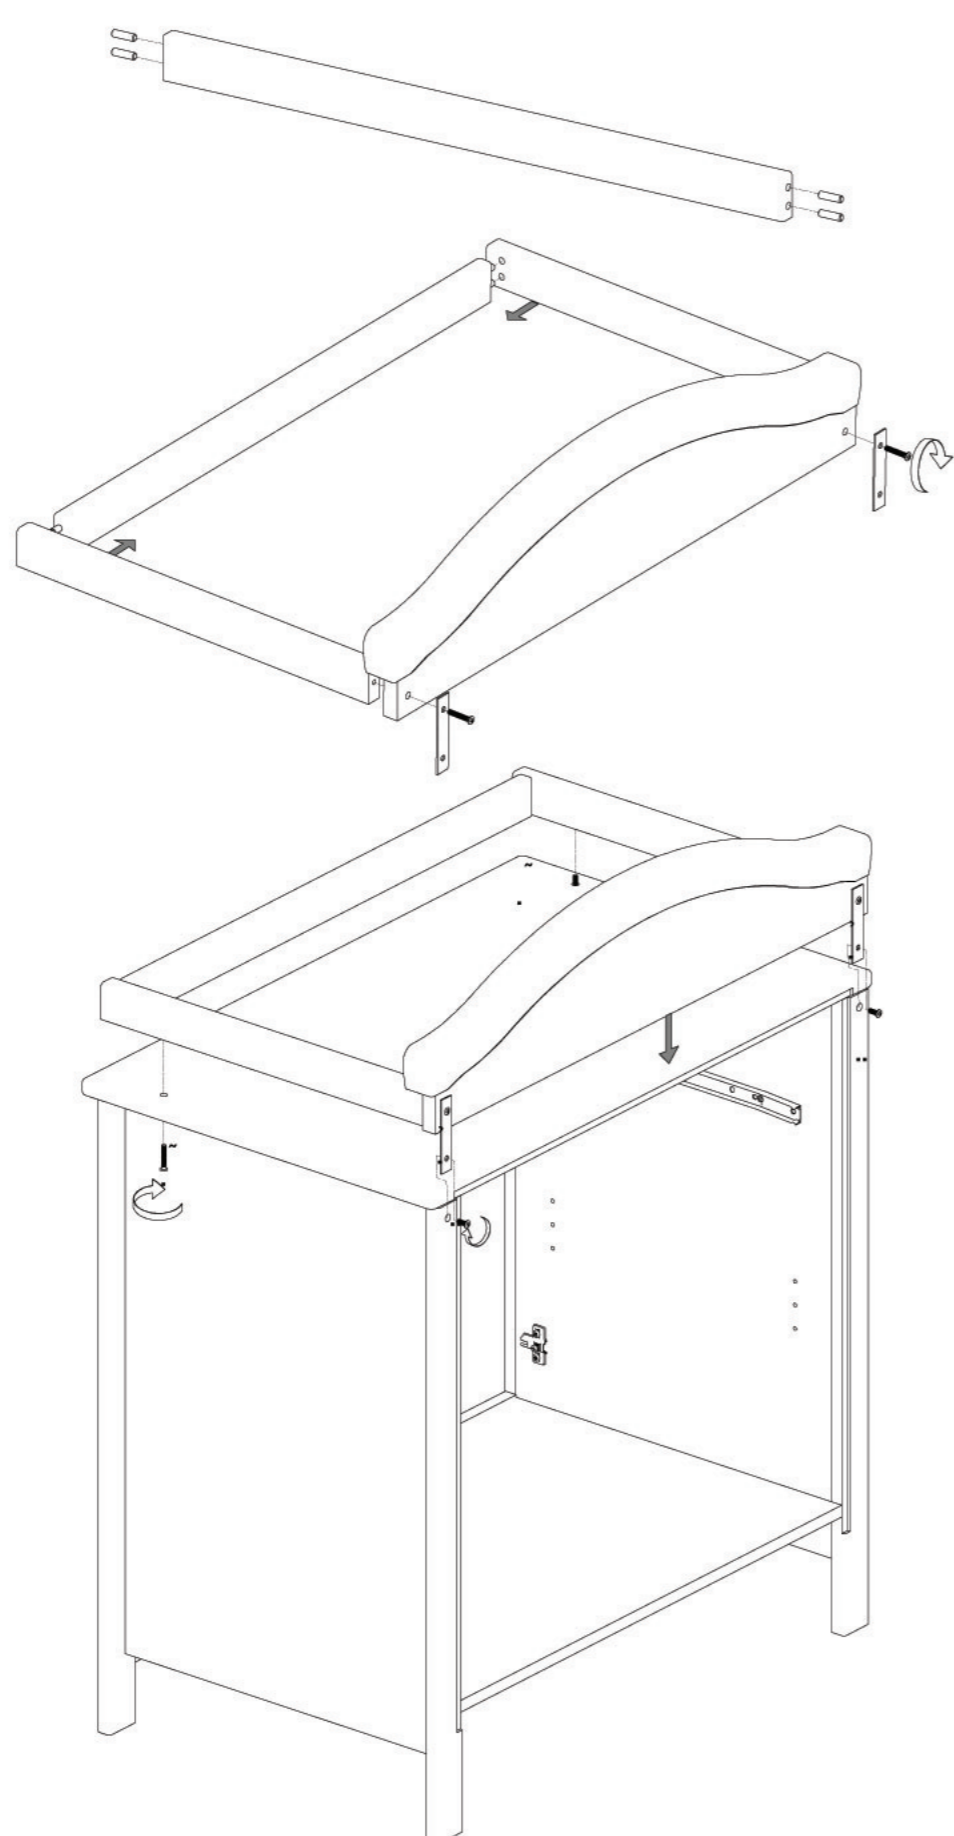

Insert 4 dowels in to the front rail.

Attach the front rail to the side rails by pushing firmly into place.


Using the back plate and 2 x M6 x 36mm screws attach the back rail to the side rails using the Allen key provided.

Place the top rails on to the changing unit top and secure on the underside with 2 x M6 x 36mm screws using the Allen key provided.

Secure the back plates to the changing unit sides using 2 x M6 x 14mm screws using the Allen key provided.

attaching the back panel


4

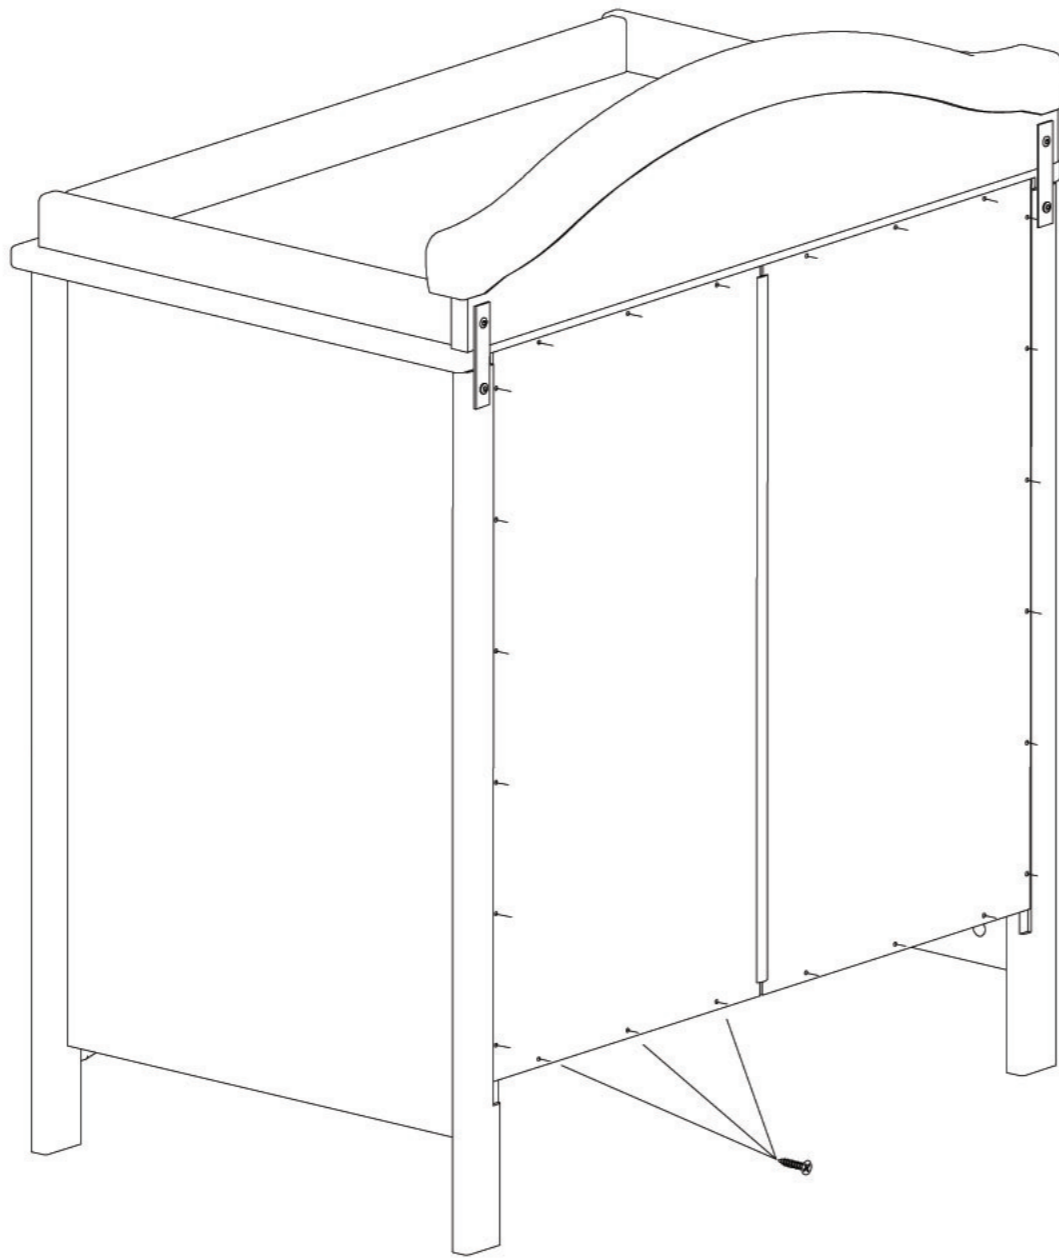

Join the 2 back panels together by sliding the plastic jointing strip on to the panels. Attach the back panels using the 24 small 3 x 16mm cross head screws.

attaching the door

5

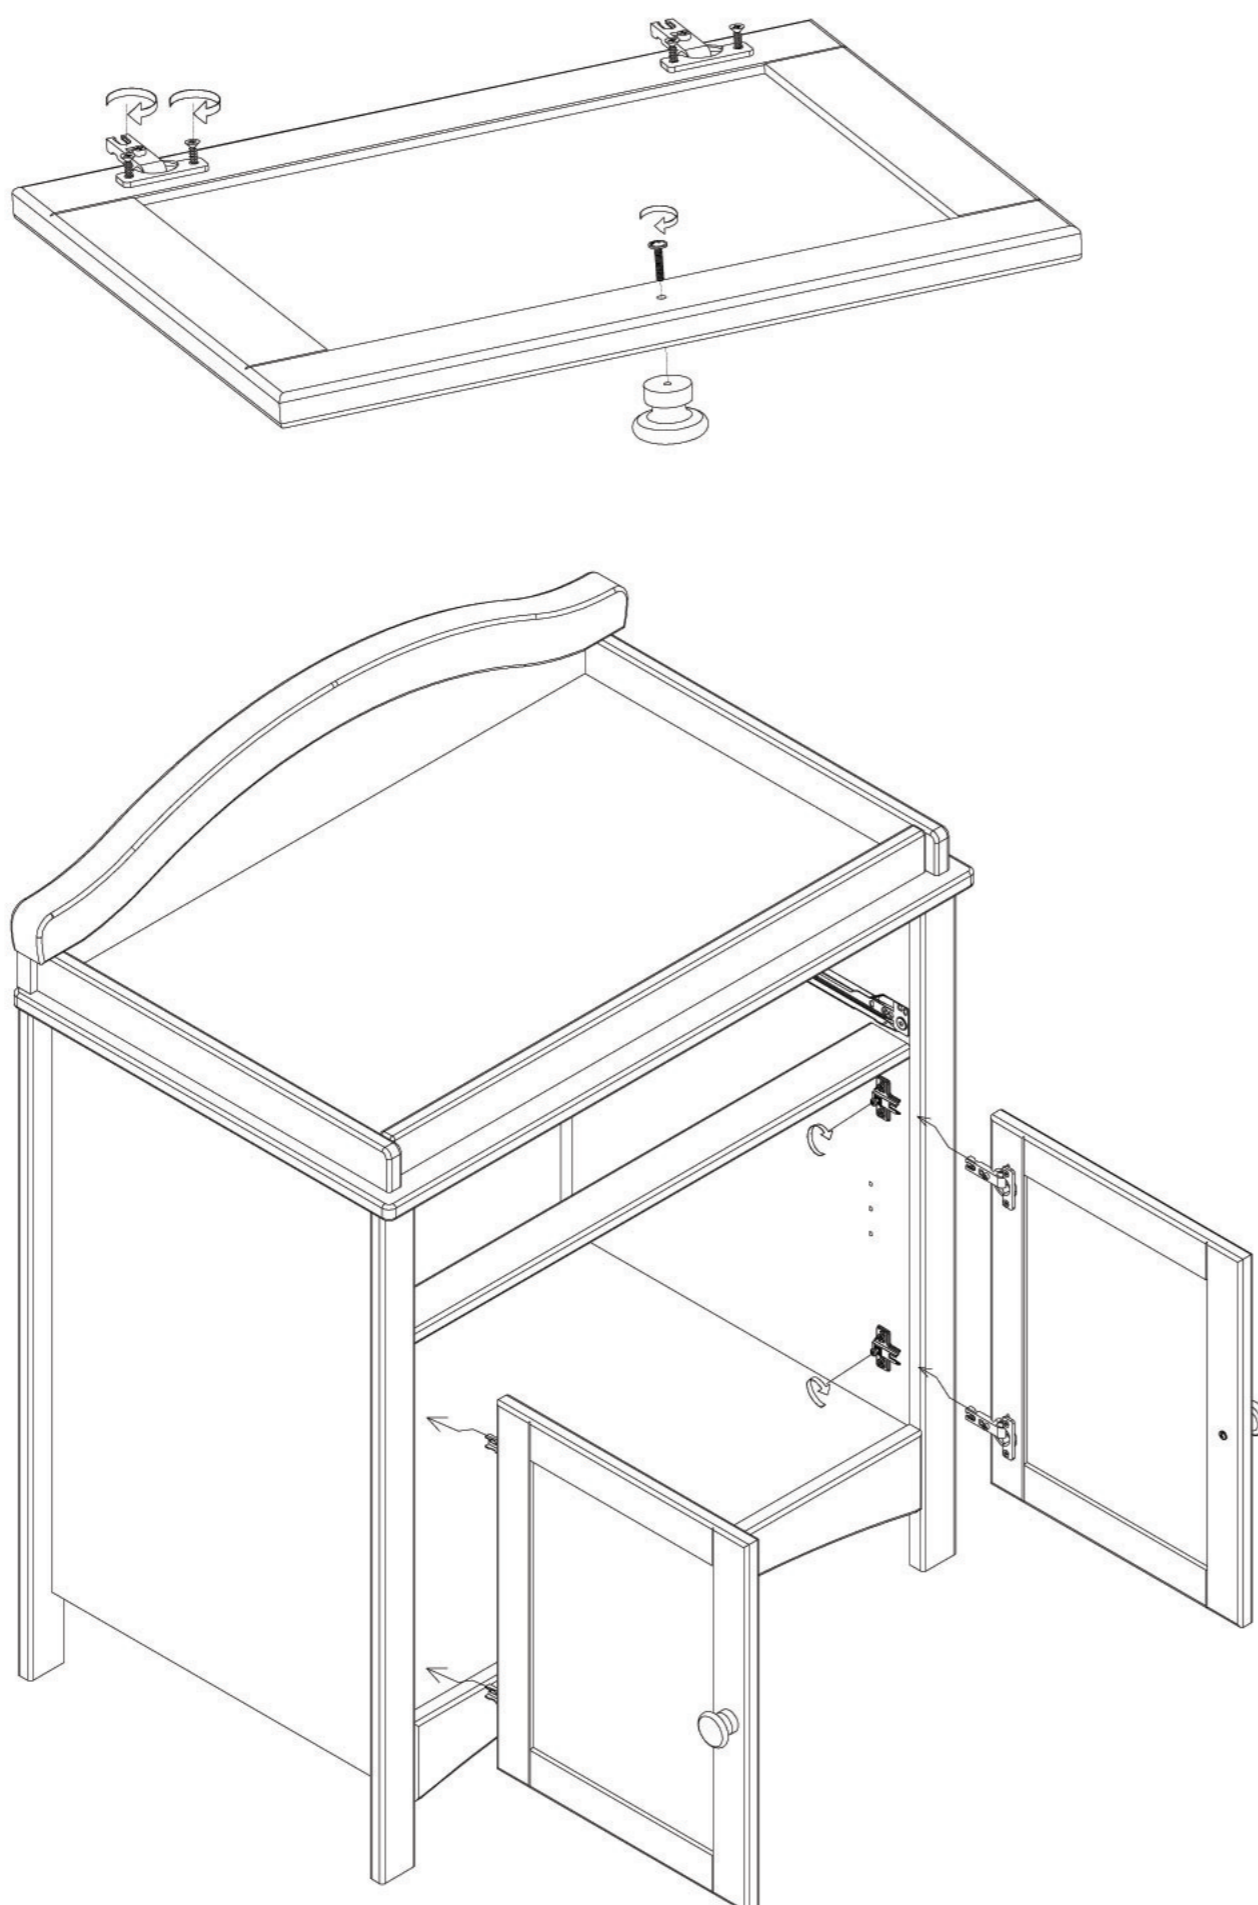


Attach the hinges to the doors using 8 small 4 x 16mm cross head screws.

Attach the handles to the doors using 2 M4 x 25mm domed head screws.

Attach the doors by sliding the door hinge on to the hinge plates. Secure the hinges in place by tightening the locating screw on the hinge plate using a cross head screw driver.

attaching the shelf

6

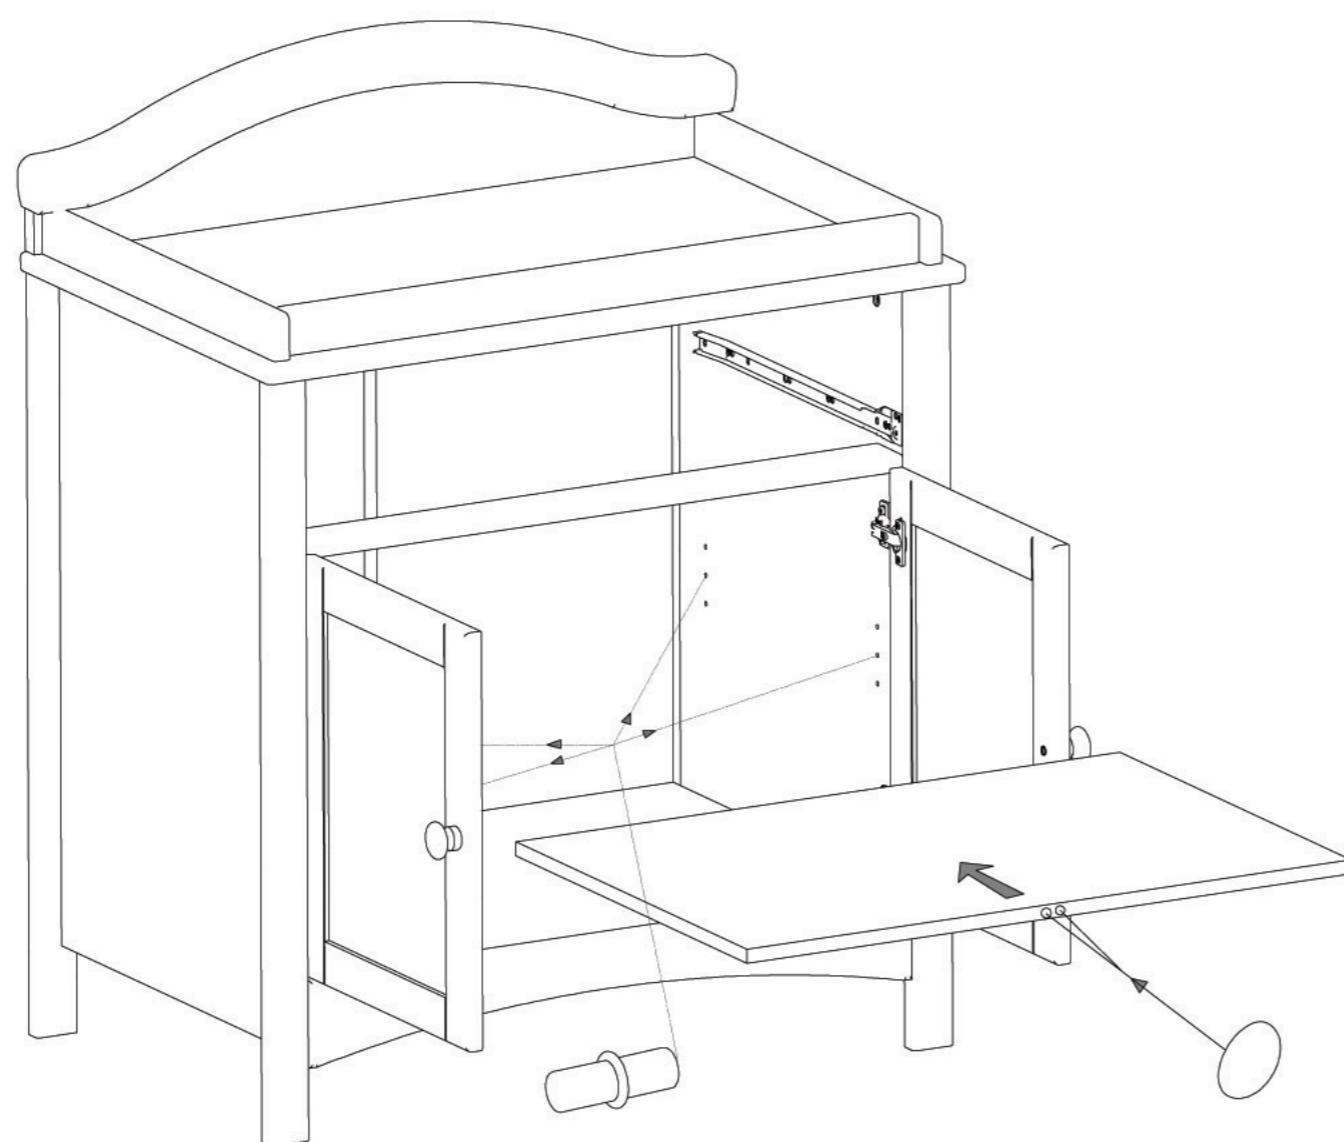

Insert 4 shelf lugs in to the sides.


Please note there are 3 shelf height positions available. Insert the shelf lugs in to the pre-drilled holes that best suit yourself.

Carefully insert the shelf on to the shelf lugs

Attach the 2 door stops to the shelf by removing the protective back from the door stop and press firmly to the shelf base.

attaching the drawer

7

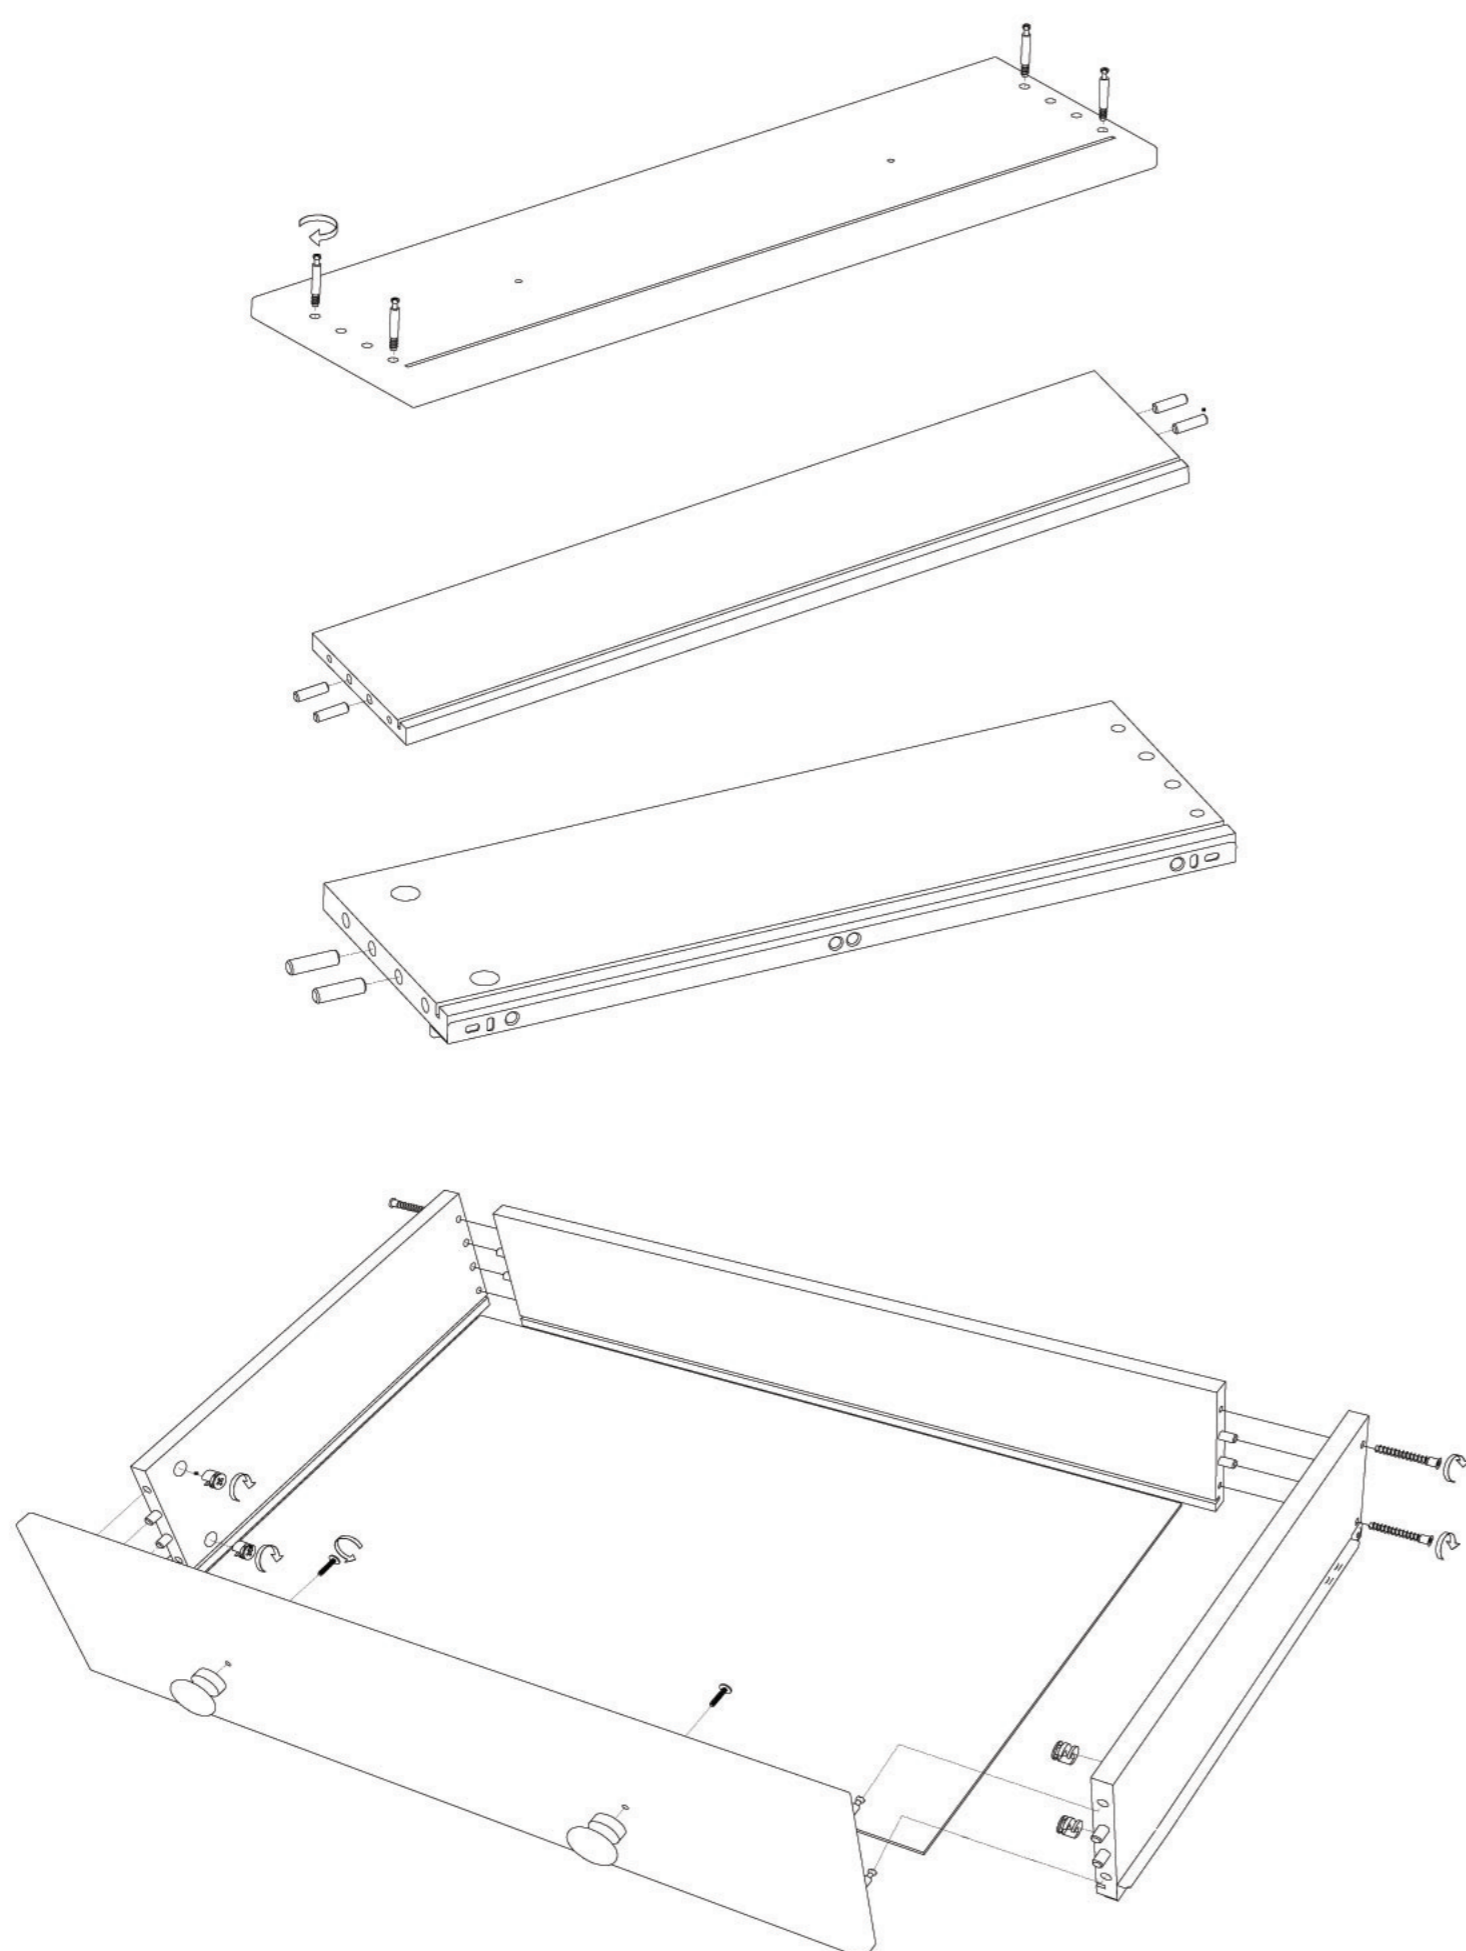

Insert 4 cam screws in to the drawer front.

Insert 4 dowels in to the drawers back.


Insert 2 dowels in to each of the drawer sides.

Attach the drawer back to the drawer sides by inserting the dowels in to their pre-drilled holes and pushing firmly together. Secure using 4 x 50mm screws tightening with the Allen key provided.

Slide the drawer base along the grooves and push firmly in to place. Attach the drawer front by pushing firmly the drawer base in the groove on the drawer front. Align the dowels and cam screws to their corresponding pre-drilled holes and push firmly in place.

Insert 4 cams in to their pre-drilled holes and lock in place using the cross head screw driver by turning these in a clockwise direction 180 degrees. Attach the handle to the drawers using 2 x M4 x 25mm domed head screws.


7

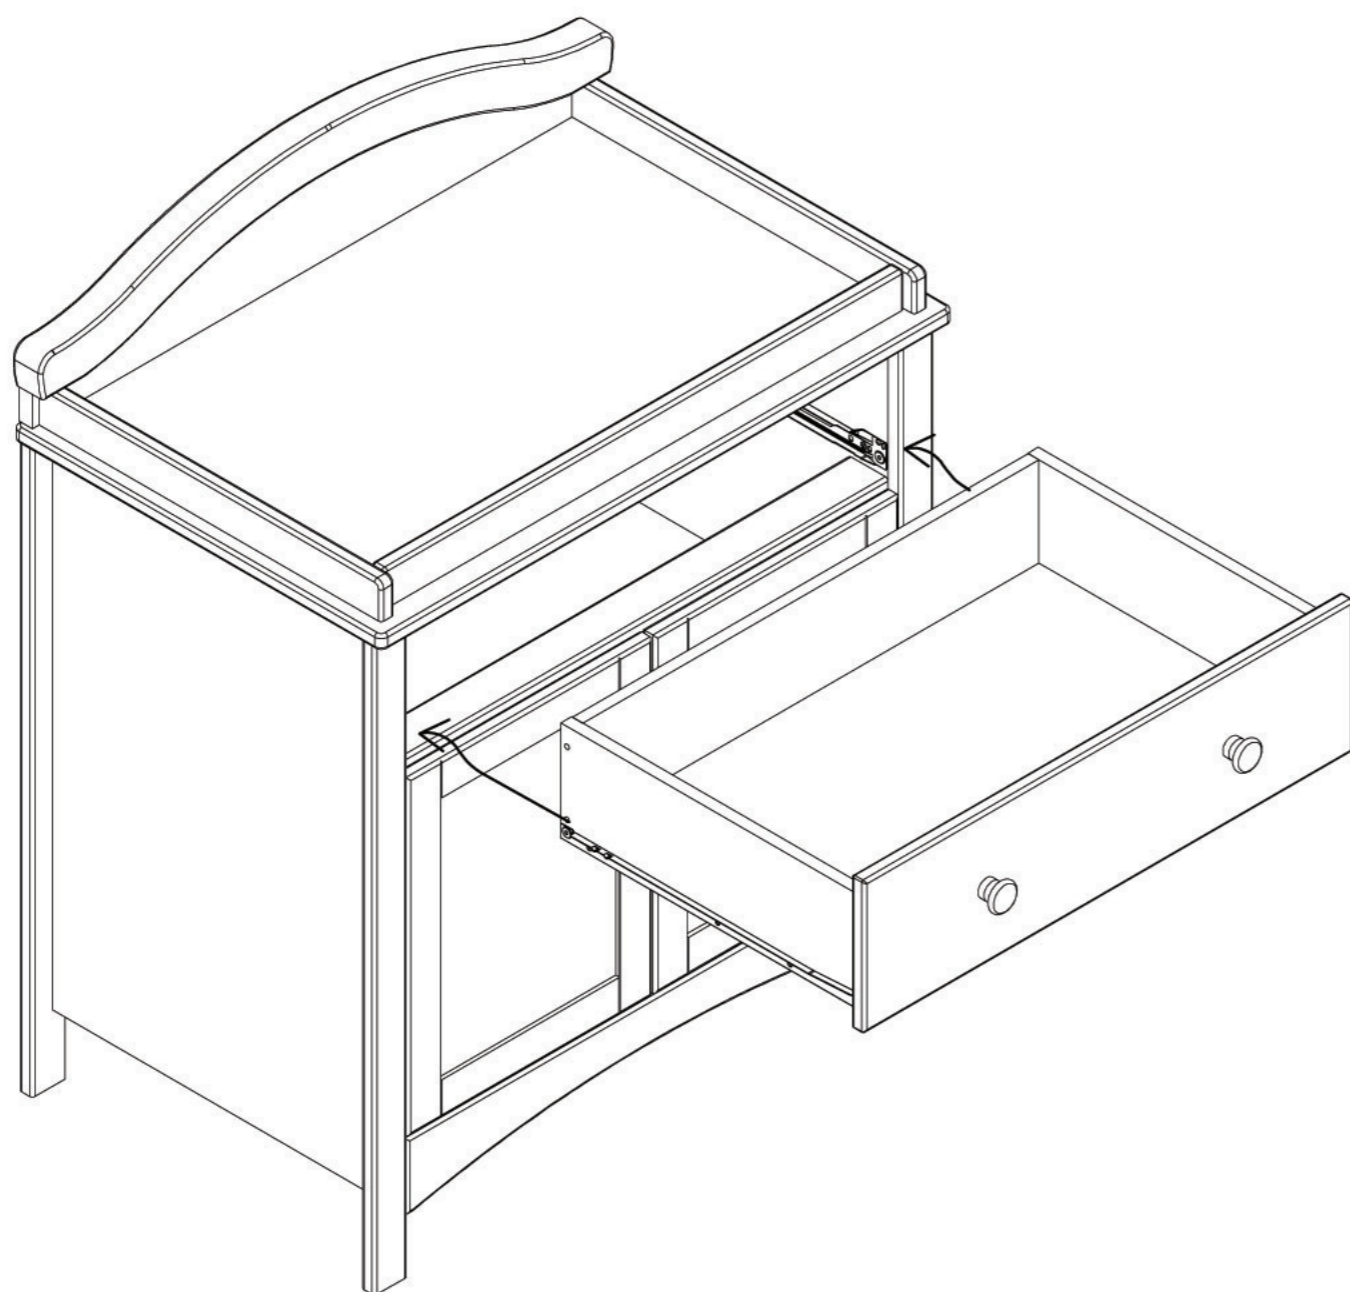

Locate the drawer in the changing unit by carefully aligning the rear drawer runner wheels on to the front runner wheels of the base unit. Slide the drawer into its fully closed position.

attaching the strap - optional

8

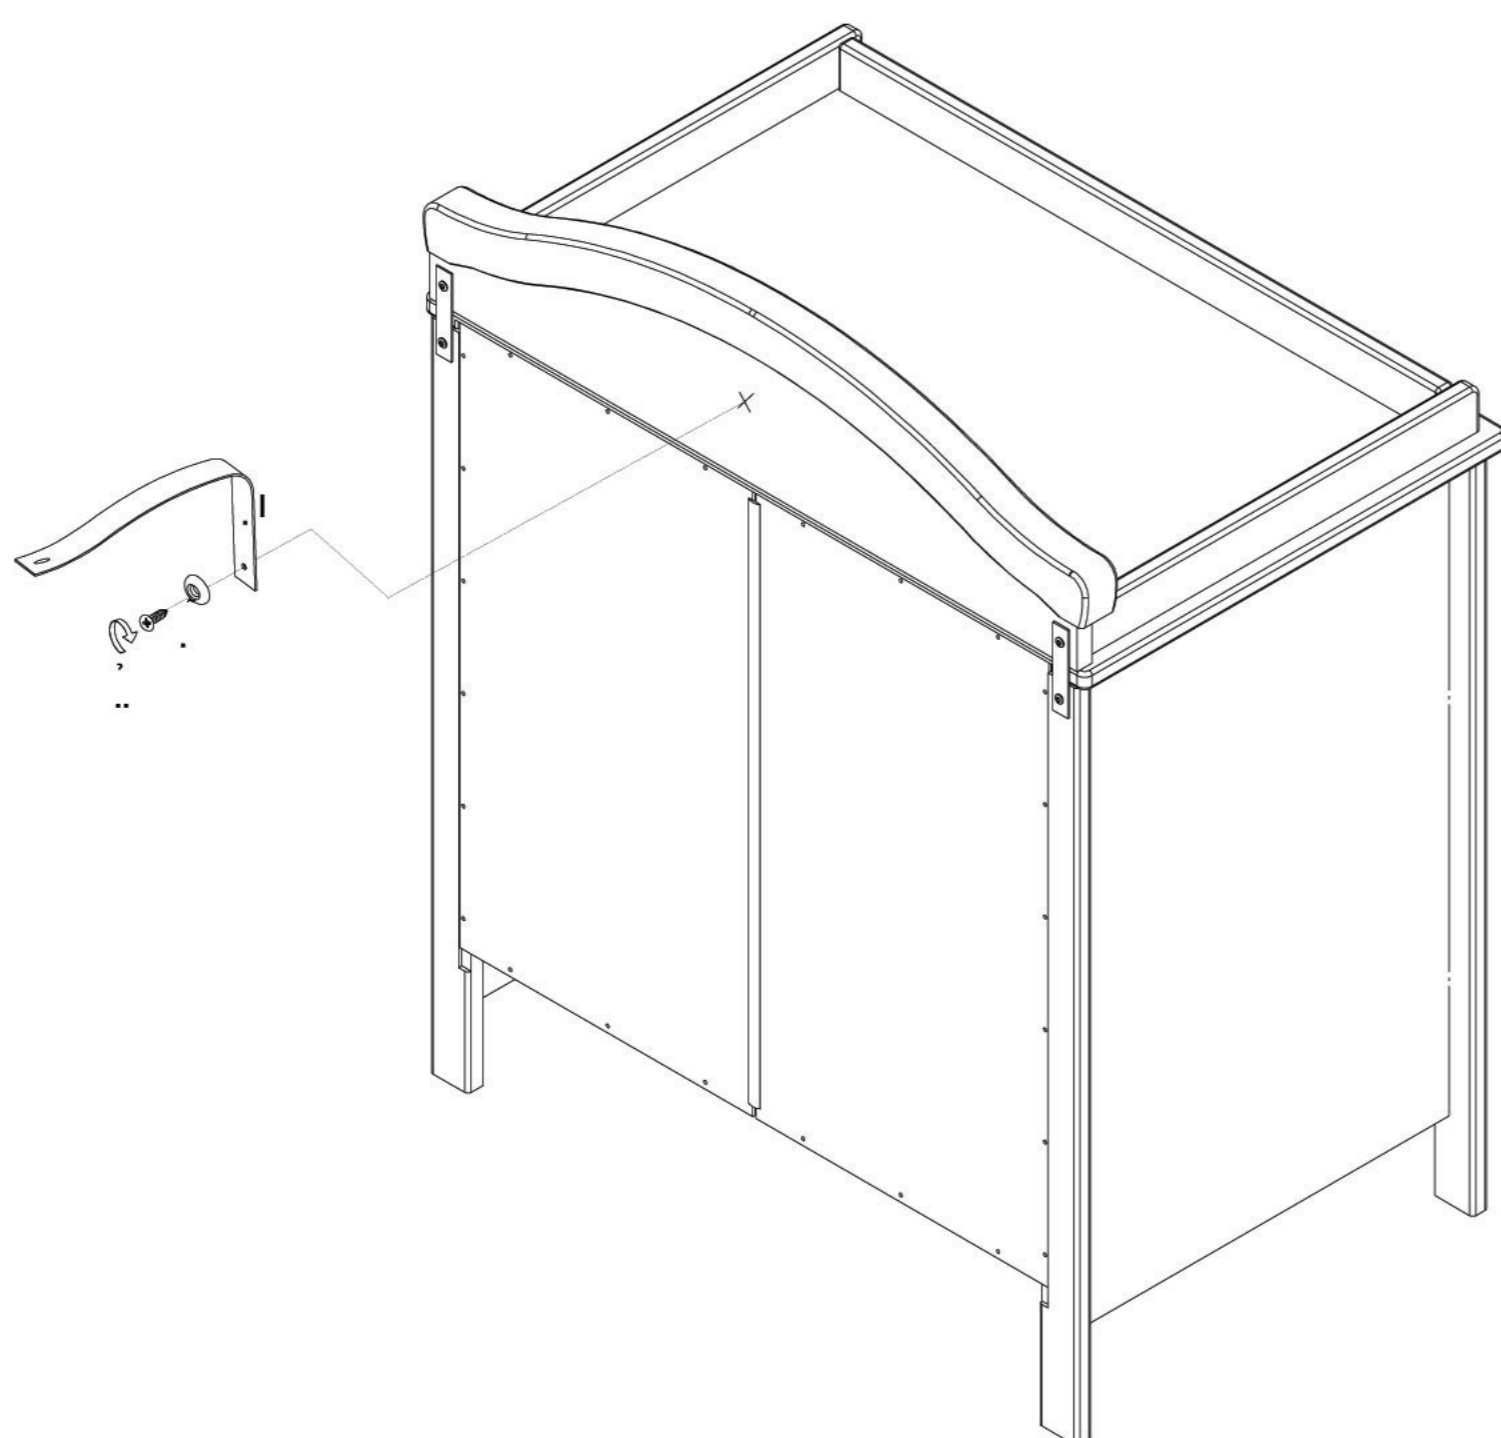



THE WINDERMERE CHANGING UNIT IS SUPPLIED WITH AN ANTI-TOPPLE DEVICE THAT SECURES TO THE WALL. FAILURE TO USE THIS COULD RESULT IN THE FURNITURE TOPPLING OVER. WE RECOMMEND THAT YOU USE THIS SAFETY DEVICE.

Using 1, 4 x 16mm screw, washer and strap, fix to the rear of the wardrobe as indicated in the diagram using a cross head screw driver.

The loose end of the strap requires fixing to the wall where the furniture will be positioned. Certain wall materials require different types of mounting hardware (e.g. plastic rawl plugs, plasterboard rawl plugs). Select mounting hardware suitable for the walls in your home. If you are unsure what type of mounting hardware required please consult your local DIY store for advice. Installation only to be carried out by a competent person.

changing to a dresser

9

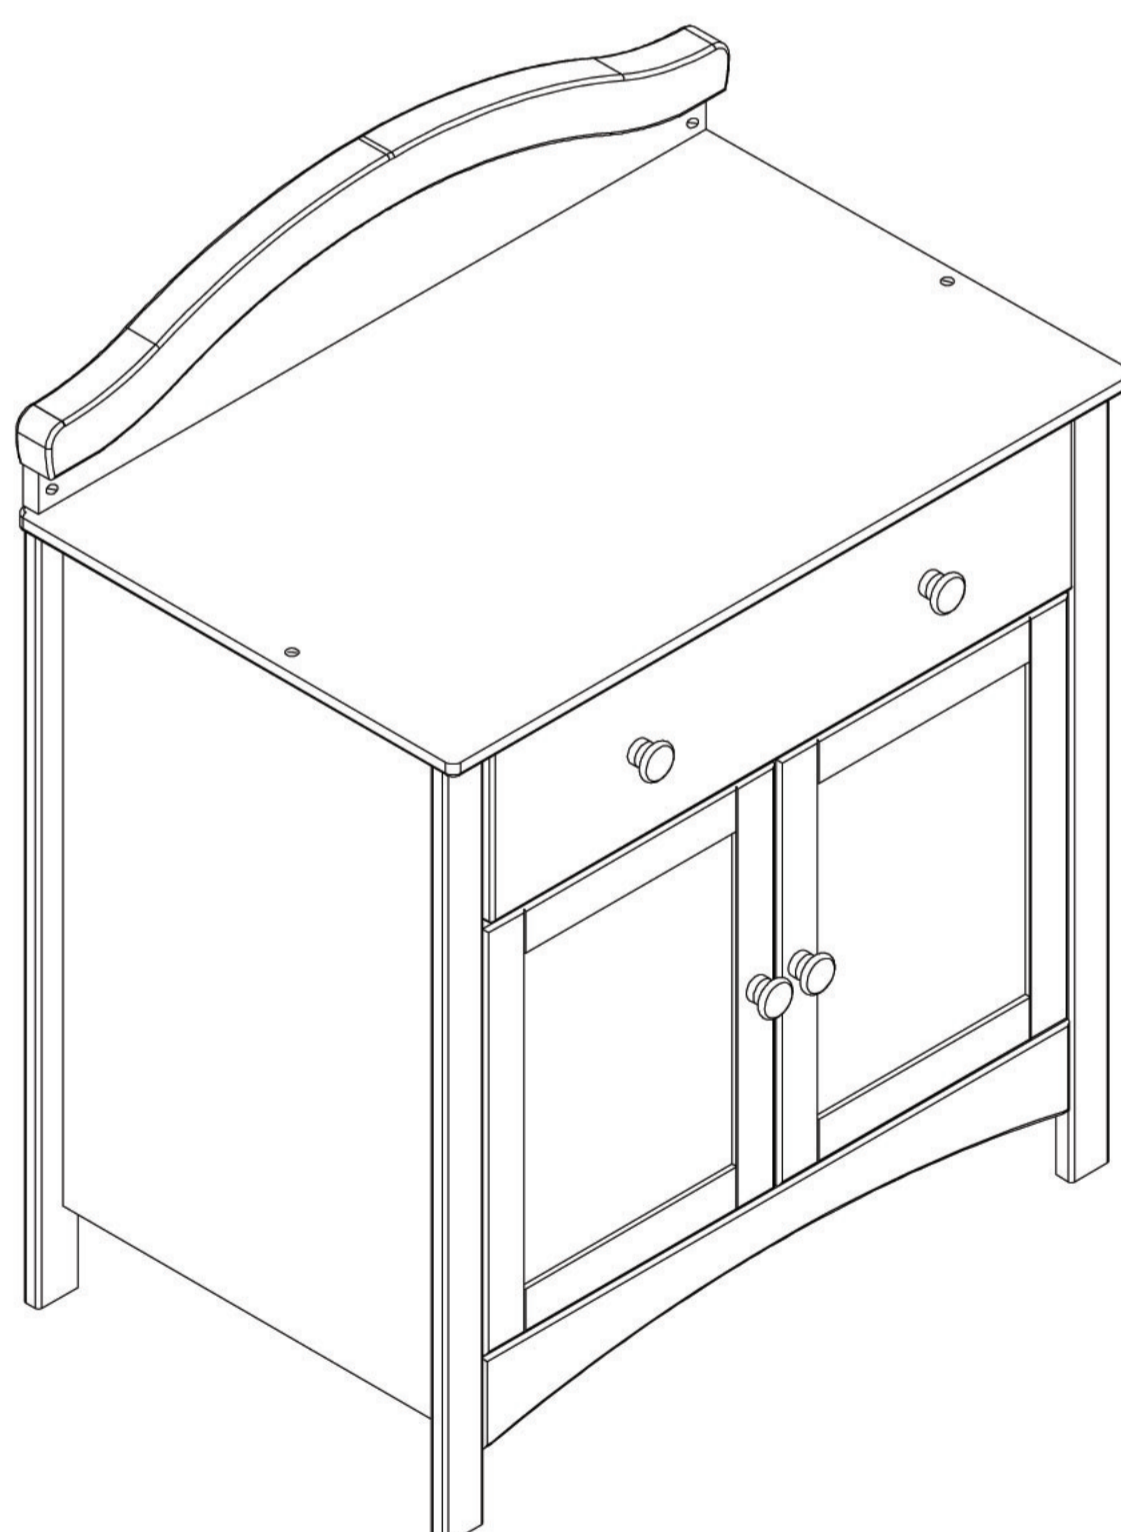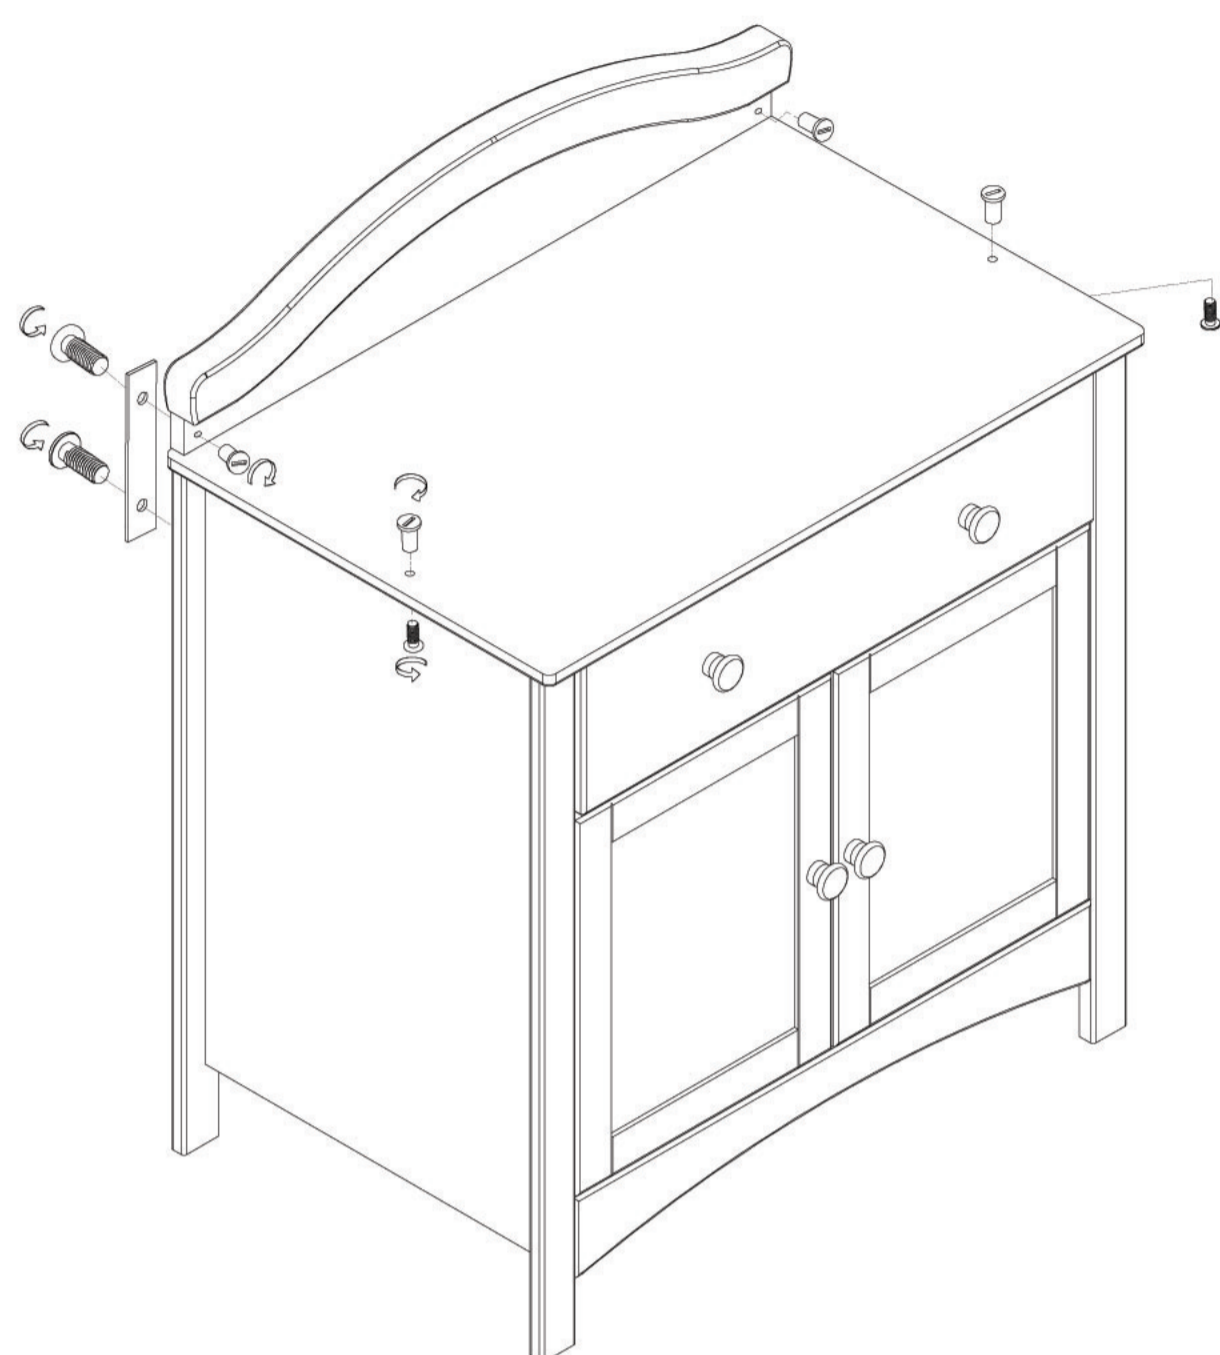

It is possible to remove the side rails and front rail of the changing unit to make in to a dresser.

Remove the 2 underside M6 x 36mm screws using the Allen key provided.

Remove the M6 x 36mm screw from the back plate and remove the front and side rails.

Insert 2 plastic blanking covers in to the fascia and re-secure the back plates to the changing unit sides using 2 x M6 x 14mm screws using the Allen key provided.

Insert 2 plastic blanking covers in to the changing unit top and secure using 2 x M6 x 14mm screws using the Allen key provided.

- This dresser is not to be used for children over 12 months old or 9kg, whichever comes first.
- **WARNING!** Do not leave the child unattended.
- All assembly fittings should be tightened properly. Screws and bolts should not be loose because a child can squeeze part of the body, or clothing (e.g. strings, necklaces, ribbons for babies dummies etc.) could get caught. There would be a danger of strangulation.
- Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires etc. in the near vicinity of the changing unit.
- An older child climbing on the changing unit while a child is on the changing surface is extremely dangerous and must be discouraged.
- The changing unit must be used on a level and stable surface.
- Keep away from trailing cords, drapes or flexes, and away from electric sockets.
- If any part is missing or broken, do not use the changing unit until the correct spare part has been obtained from Mothercare.
- Periodically check all fittings to ensure that none have come loose.
- Clean your changing unit using a damp cloth and drying with a soft cloth. Never clean with abrasives, chemical cleaners or household polishes.
- Take care when handling or moving the changing unit. Careless handling can damage wooden furniture. Never move the changing unit with the child on it.

If you have a problem with this product or require replacement parts, please contact your nearest Mothercare store or telephone the Mothercare customer care line on 08453 30 40 30.

Alternatively write to: Customer Care, Mothercare, Cherry Tree Road, Watford, Herts, WD24 6SH.

www.mothercare.com