




steam steriliser

instruction manual

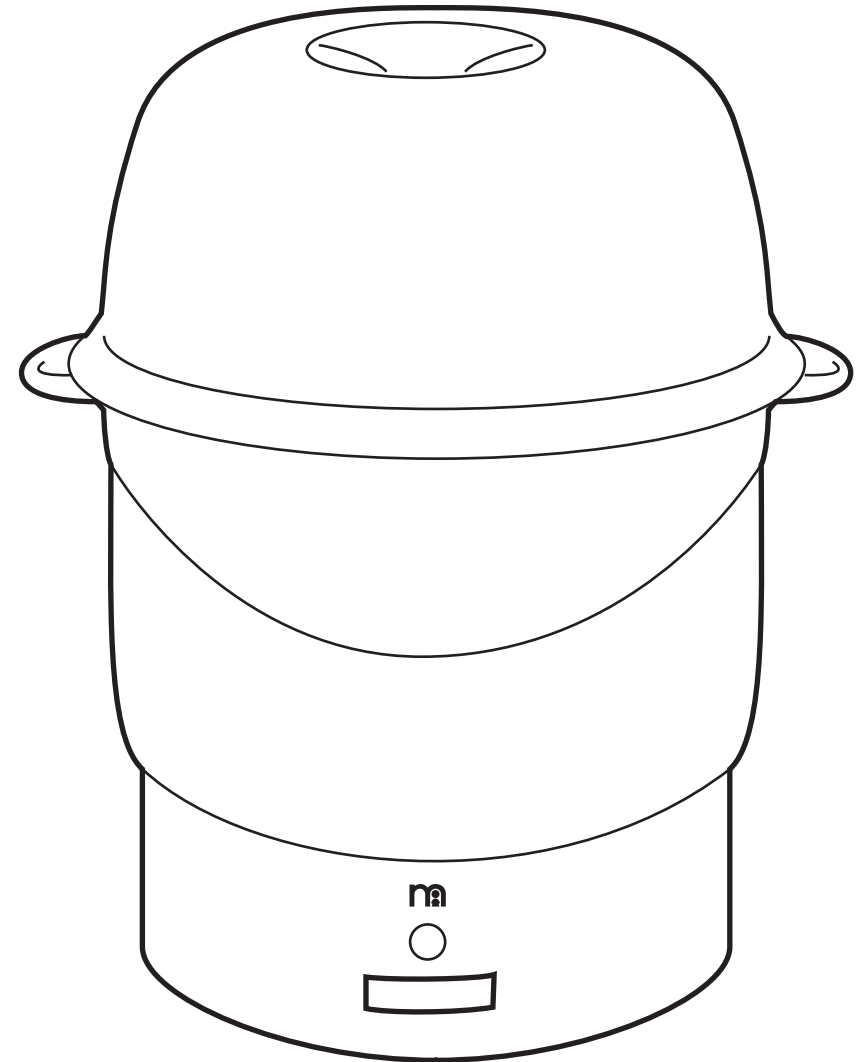

mothercare

Please keep a note of our company name and address.
Made for Mothercare, Watford, England WD24 6SH
www.mothercare.com

Fig 1




Fig 2



Fig 3



Fig 4

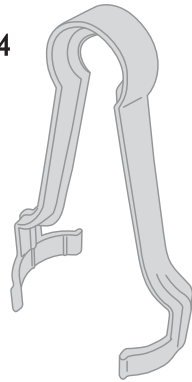

contents

- **steriliser** Fig 1.
Fig 1a - indicator light
Fig 1b - on/off switch
- **bottle holder and accessory tray** Fig 2
- **stainless steel heating base** Fig 3
- **tongs** Fig 4

Instructions

- pour 80ml of water into the base
- place the bottle holder in the steriliser
- place the washed bottles upside down onto the locators on the base of the holder
- place collars on the central stem
- fit the accessory tray on the stem
- place teats, caps and the tongs on the tray
- replace the cover and plug into the mains
- switch the steriliser on, the cycle takes approximately 10 minutes
- turn the steriliser off at the mains and allow it to cool before removing the items

warnings

- keep the steriliser out of the reach of children
- ensure that the steriliser base is secure on a flat heat resistance surface
- add the right amount of water. Too little water means that the items may not be properly sterilised. Too much water will prolong the cycle time
- always wait until the light goes off before opening the unit
- wash your hands before handling sterilised items
- take care when handling sterilised items as they may be hot
- do not open during cycle as it contains boiling water and steam. If you need to stop the steriliser during the cycle, switch off and unplug from the mains. Wait for at least 3 minutes before opening to prevent scalding.
- allow the unit to cool then unplug the steriliser before pouring out any remaining water and wiping the unit dry
- always unplug the steriliser from the mains when not in use
- after each use, pour away any remaining water from the unit and wipe dry using a non abrasive cloth
- do not use bleach, abrasives or antibacterial materials or scourers to clean the steriliser.
- do not use chemical sterilising solution or tablets
- do not touch or move the steriliser whilst it is operating
- do not leave cable trailing on a worktop where it can be reached by children
- do not sterilise metallic items
- do not immerse the steriliser base in water
- do not place items on top of the steriliser in operation

you should descale your steriliser every 4 weeks to ensure it continues to work efficiently, especially if you live in a hard water area. For best results use Mothercare descaling sachets